

netsys
Networking your world



NV-600L/R
VDSL2 CO/CPE Router
USER'S MANUAL

Copyright

Copyright © 2010 by National Enhance Technology Corp. All rights reserved.

Trademarks

NETSYS is a trademark of National Enhance Technology Corp.

Other brand and product names are registered trademarks or trademarks of their respective holders.

Legal Disclaimer

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, National Enhance Technology Corp. hereby disclaims any and all warranties and liabilities of any kind, including without limitation warranties of non-infringement of intellectual property rights of any third party.

Statement of Conditions

In the interest of improving internal design, operational function, and/or reliability, NETSYS reserves the right to make changes to the products described in this document without notice. NETSYS does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Maximum signal rate derived form IEEE Standard specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate.

VDSL2 Point to Point Solution

VDSL2 (Very-High-Bit-Rate Digital Subscriber Line 2, ITU-T G.993.2 Standard) is an access technology that exploits the existing infrastructure of copper wires that were originally deployed for [POTS](#) services. It can be deployed from central offices, from fibre-fed cabinets located near the customer premises, or within buildings.

ITU-T G.993.2 VDSL2 is the newest and most advanced standard of [DSL](#) broadband wireline communications. Designed to support the wide deployment of Triple Play services such as voice, video, data, high definition television (HDTV) and interactive gaming, VDSL2 enables operators and carriers to gradually, flexibly, and cost efficiently upgrade existing xDSL-infrastructure.

ITU-T G.993.2 (VDSL2) is an enhancement to G.993.1 [VDSL](#) that permits the transmission of asymmetric and symmetric (Full-Duplex) aggregate data rates up to 200 Mbit/s on twisted pairs using a bandwidth up to 30 MHz.

VDSL2 deteriorates quickly from a theoretical maximum of 200 Mbit/s (Full-Duplex) at 'source' to 100 Mbit/s at 0.3 km (symmetric).

Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions before device use.

- DO NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel can service the device. Please contact your vendor for further information.
- Use ONLY the dedicated power supply for your device. Connect the power cord or power adaptor to the right supply voltage (110V AC in North America or 230V AC in Europe).
- DO NOT use the device if the power supply is damaged as it might cause electrocution.
- If the power supply is damaged, remove it from the power outlet.
- DO NOT attempt to repair the power supply. Contact your local vendor to order a new power supply.
- Place connecting cables carefully so that no one will step on them or stumble over them. DO NOT allow anything to rest on the power cord and do NOT locate the product where anyone can work on the power cord.
- DO NOT install nor use your device during a thouderstorm. There may be a remote risk of electric shock from lightning.
- DO NOT expose your device to dampness, dust or corrosive liquids.
- DO NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Connect ONLY suitable accessories to the device.
- Make sure to connect the cables to the correct ports.
- DO NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.
- DO NOT store things on the device.
- DO NOT use the device outside, and make sure all the connnections are indoors. There may be a remote risk of electric shock from lightning.
- Be careful when unplugging the power, because the transformer may be very hot.
- Keep the device and all its parts and accessories out of children's reach.
- Clean the device using a soft and dry cloth rather than liquid or atomizers. Power off the equipment before cleansing it.
- This product is recyclable. Dispose of it properly.

Table of Contents

| | |
|--|-----------|
| Copyright..... | 1 |
| Safety Warnings..... | 3 |
| Table of Contents..... | 4 |
| 1.Unpacking Information..... | 8 |
| 1.1 Check List..... | 8 |
| 2. Complete Installation | 9 |
| 2.1 Hardware Installation | 9 |
| 2.2 Pre-installation Requirements..... | 9 |
| 2.3 General Rules..... | 10 |
| 2.4 NV-600L/R Connections | 10 |
| 3. Hardware Description..... | 12 |
| 3.1 Front Panel..... | 12 |
| 3.2 Six LED indicators | 13 |
| 3.3 Front Indicators..... | 13 |
| 3.4 Rear Panel..... | 14 |
| 3.5 Power On..... | 14 |
| 4. Configure the NV-600L/R Via Web Browser..... | 15 |
| 4.1 Login..... | 15 |

| | |
|--|-----------|
| 4.2 Select the Menu Level | 16 |
| 4.3 Select Advanced Setup..... | 18 |
| 4.4 Select LAN..... | 20 |
| 4.4.1 Select LAN Settings and set the IP Address | 21 |
| 4.4.2 Restart the Settings Dialog | 23 |
| 5. Configure the NV-600L/R via Console..... | 24 |
| 5.1 Setup on Hyperterminal..... | 24 |
| 5.2 Reset the system to default configuration..... | 24 |
| 6. Building a VDSL2 System | 25 |
| 6.1 Connect the NV-600L and the NV-600R to the Line | 26 |
| 6.2 Connect the NV-600L and the NV-600R to LAN Devices | 26 |
| 6.3 Run Demos and Tests | 26 |
| 7. Operating the VDSL2 System | 27 |
| 7.1 Configuration Settings | 27 |
| 7.1.1 Channel Configuration | 28 |
| 7.1.2 Line Configuration..... | 31 |
| 7.1.3 Profile Configuration | 32 |
| 7.1.4 Loop Back..... | 399 |
| 7.1.5 Line Activation..... | 40 |
| 7.2 Status Displays | 41 |
| 7.2.1 Line Status | 41 |
| 7.2.2 Channel Status | 42 |
| 7.2.3 Version Info..... | 43 |
| 7.2.4 SNR Graphs | 44 |
| 7.2.5 BitsGraphs..... | 46 |

| | |
|---|-----------|
| 8. Configuration Interface of the Router | 47 |
| 8.1 Logging in to the NV-600L/R..... | 48 |
| 8.2 Setup Wizard and Advanced Setup | 49 |
| 8.2.1 Setup Wizard | 50 |
| 8.2.2 Advanced Setup..... | 51 |
| 8.2.3 System..... | 53 |
| 8.2.3.1 Administrator Settings..... | 54 |
| 8.2.3.2 Firmware Upgrade | 56 |
| 8.2.3.3 Device Mode..... | 57 |
| 8.2.3.4 System Status..... | 58 |
| 8.2.3.5 Reboot | 59 |
| 8.2.3.6 Reset system | 60 |
| 8.2.4 WAN | 61 |
| 8.2.4.1 Dynamic IP | 62 |
| 8.2.4.2 IP Settings | 63 |
| 8.2.4.3 PPPoE | 65 |
| 8.2.4.4 DNS | 67 |
| 8.2.5 LAN..... | 69 |
| 8.2.5.1 LAN Settings..... | 70 |
| 8.2.5.2 DHCP Client List..... | 72 |
| 8.2.5.3 LAN Switch Port Setting..... | 73 |
| 8.2.5.4 LAN Port Status | 74 |
| 8.2.6 NAT..... | 75 |
| 8.2.6.1 Virtual Server | 76 |
| 8.2.6.2 Port Mapping | 78 |
| 8.2.6.3 DMZ..... | 80 |
| 8.2.7 Firewall | 81 |
| 8.2.7.1 Firewall Options..... | 82 |
| 8.2.7.2 Client Filtering..... | 84 |
| 8.2.7.3 MAC Control | 86 |

| | |
|---|------------|
| 8.2.8 Route Settings | 88 |
| 8.2.8.1 Static Routing..... | 89 |
| 8.2.8.2 Routing Table List | 90 |
| 8.2.9 UPnP Setting | 91 |
| 8.2.9.1 Settings..... | 92 |
| Appendix A: Product Features & Specification | 93 |
| <i>Features:</i> | 93 |
| <i>Specifications:</i> | 94 |
| Appendix B: Troubleshooting | 96 |
| Appendix C : Compliance and Safety Information..... | 98 |
| Warranty | 101 |

1.Unpacking Information

1.1 Check List

Carefully unpack the package and check its contents against the checklist.

Package Contents

- VDSL2 Router (NV-600L for CO side/ NV-600R for CPE side)
- Two rubber feet
- User's Manual
- AC to DC 12V Power Adapter
- RJ-45 cable
- RJ-11 cable

Please inform your dealer immediately for any missing or damaged parts.

If possible, retain the carton including the original packing materials.

Use them to repack the unit in case there is a need to return for repair.

2. Complete Installation

2.1 Hardware Installation

This chapter describes how to install the NV-600L/R and establishes network connections. This may install the NV-600L/R on any level surface (e.g, a table or shelf). However, please take note of the following minimum site requirements before you begin.

2.2 Pre-installation Requirements

Before the start actual hardware installation, make sure to provide the right operating environment, including power requirements, sufficient physical space and proximity to other network devices that are to be connected. Verify the following installation requirement:

- Power requirements: DC12V/1A or above.
- The NV-600L/R should be located in a cool dry place, with at least 10cm/4in of space at the front and back for ventilation.
- Place the NV-600L/R out of direct sunlight, and away from heat sources or areas with a high amount of electromagnetic interference.
- Check if network cables and connectors needed for installation are available

2.3 General Rules

Before making any connections to the NV-600L/R, note the following rules:

- Ethernet Port (RJ-45)
All network connections to the Router Ethernet port must be made using Category 5 UTP for 100Mbps;
Category 3, 4 UTP for 10Mbps
No more than 100 meters of cabling may be use between the MUX or HUB and an end node.
- Phone Port (RJ-11)
All Phone set connections to the RJ-11 Port must use 24~26 Gauge phone wiring.

2.4 NV-600L/R Connections

The NV-600L/R can be controlled by a PC. For this purpose, a PC is needed with an Ethernet network interface and a DB-9 RS-232 serial interface. Two programs are required: A Web browser is mandatory and a terminal program should be available optionally.

The board has several connectors.

- 4 Ethernet RJ-45 jacks; the Auto MDIX feature of the port switches automatically between MDI and MDI-X (MDI – X = Media Dependant Interface - Crossover). Therefore straight Ethernet cables can be used.
- 2 x RJ-11 jack (Line port is for VDSL client side connection to Line interface, Phone port is for connection to phone set or FAX machine).
- 1 x Console port (access monitoring to operating system for firmware downloads, starting drivers and etc.)
- 1 Power Supply (as described above)

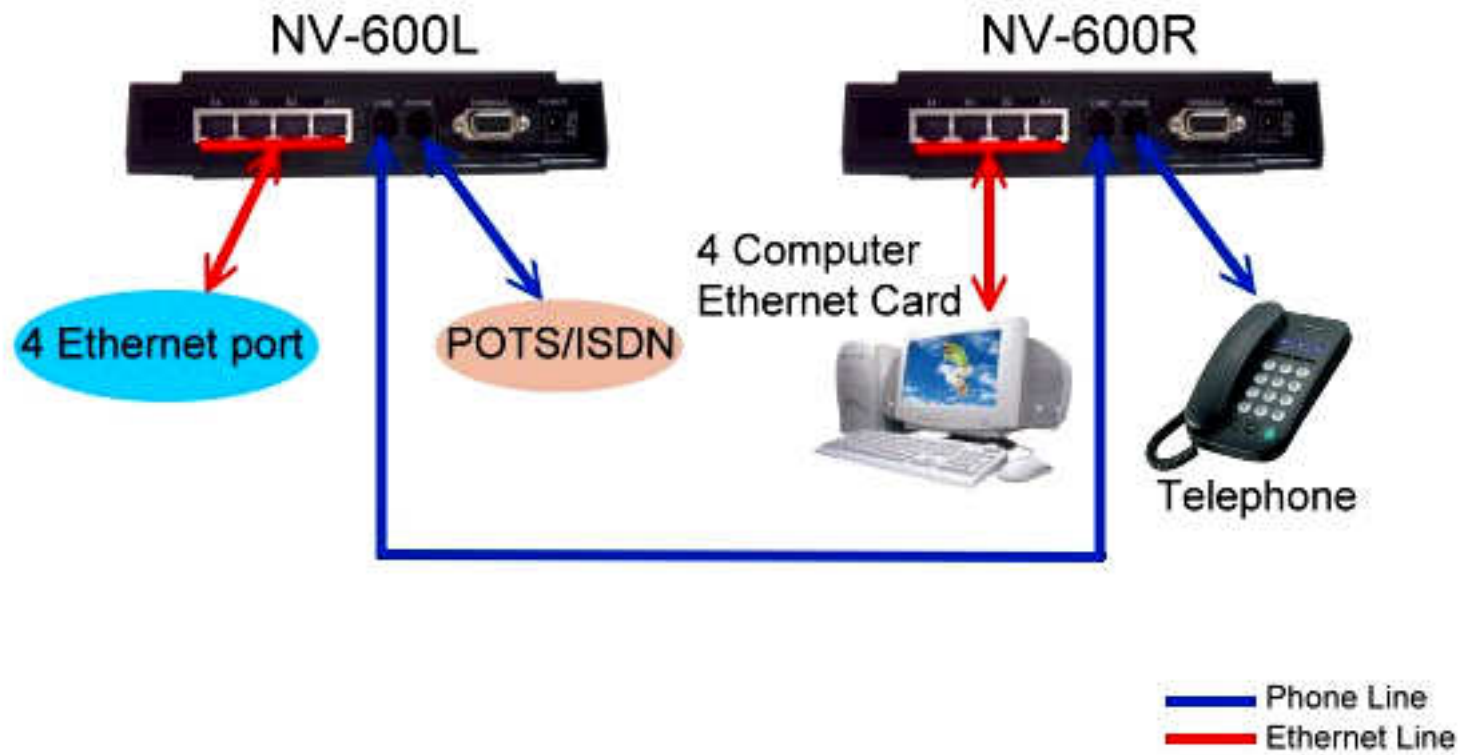


Figure 2.4 VDSL2 Basic Setup

3. Hardware Description

This section describes the important parts of the NV-600L/R. It features the front indicators and rear connectors.

3.1 Front Panel

The following figure shows the front panel.

Figure 3.1.1 NV-600L


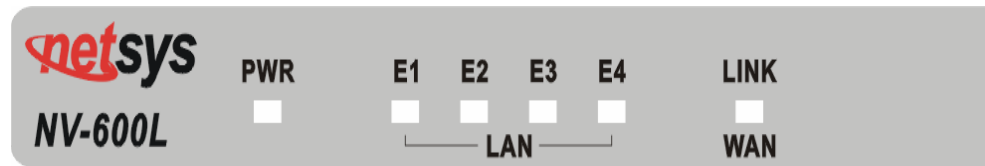


Figure 3.1.2 NV-600R

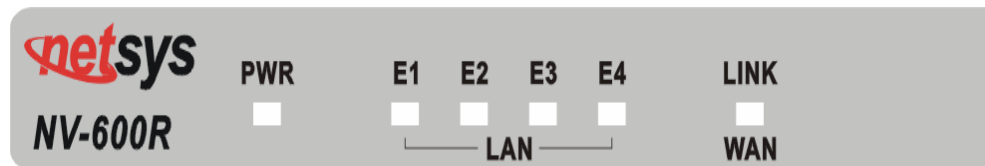

3.2 Six LED indicators

At a quick glance of the front panel, it will be easy to tell if the router has power signal from its Ethernet RJ-45 port or there is phone line signal RJ-11port

3.3 Front Indicators


The following table describes the LEDs.

| LEDs | Color | Status | Descriptions |
|----------------|-------|----------|---|
| PWR | Green | On | The device is receiving the power and functioning properly. |
| | | Off | The device is not ready or has malfunctioned. |
| E1~E4 (LAN) | Green | On | The device has a good Ethernet connection. |
| | | Blinking | The device is sending or receiving data. |
| | | Off | The LAN is not connected. |
| LINK / WAN | Green | On | The Internet or network connection is up. |
| | | Blinking | The device is sending or receiving data. |
| | | Off | The Internet or network connection is down. |

3.4 Rear Panel

The following figure shows the rear connectors

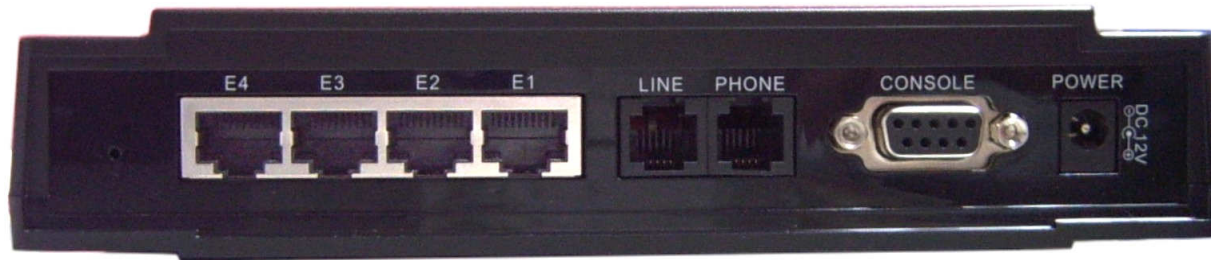Figure 3.4 Rear Connectors



NV-600L/R Rear Connectors

| Connectors | Type | Description |
|------------|--------|---|
| Line | RJ-11 | For connecting to the VDSL2 Router Using a RJ-11 cable |
| Phone | RJ-11 | For connecting to the POTS equipment or ISDN router |
| E1~E4 | RJ-45 | For connecting to a Ethernet equipped device |
| Console | RS-232 | For connecting to PC with RS-232 serial port over a D-SUB Cable |

3.5 Power On

Check the adapter is properly connected.

Verify the power LED is steadily on.

4. Configure the NV-600L/R Via Web Browser

The NV-600L/R provides a built-in HTML based management interface that allow user configure the NV-600L/R via Internet Browser. Recommend using Internet Explorer 6.0 or later version and set screen resolution at 1024 x 768.

In order to use the web browser configure the device, you may need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in windows XP SP2.
- JavaScripts. (Enabled by default)
- Java permissions. (Enabled by default)

Launch your web browser and input the IP address [192.168.16.249](#) (NV-600L) or [192.168.16.250](#) (NV-600R) in the Web page.

4.1 Login

The default password is “[admin](#)“. The password is changeable in Administrator Settings.


A screenshot of a web-based login dialog box. The dialog has a purple header bar with the text "LOGIN PASSWORD" in white. Below the header, the word "Password:" is displayed in a brown font. To the right of the text is a text input field containing five black dots. Below the input field are two buttons: "LOGIN" and "CANCEL", both with blue borders and light blue backgrounds.

Figure 4.1 Login Password

4.2 Select the Menu Level

There is an easy Setup Wizard for end users at the NV-600R and an Advanced Setup for more detail configurations. This manual attaches importance to the Advanced Setup.



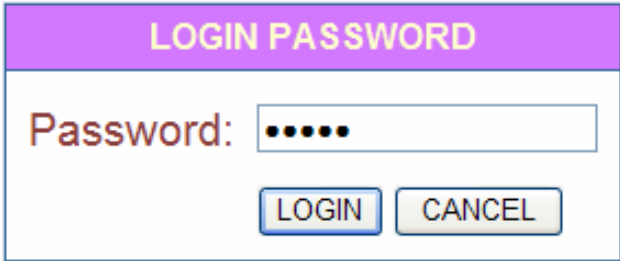

Figure 4.2 Select the Advanced Setup in the Entry Screen

4.3 Select Advanced Setup

Select the Advanced Setup. The menu below will be used frequently. As an exercise and an example now the IP address will be set.



NV-600L

System

LAN

Route

Vdsl2

Advanced Setup

The VDSL2 CO Modem supports advanced functions like hacker attack detection, client filtering, virtual servers, special application access, and a virtual DMZ host.

Netsys recommends you keep the default settings.



NV-600R

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

Advanced Setup

The VDSL2 CPE Modem supports advanced functions like hacker attack detection, client filtering, virtual servers, special application access, and a virtual DMZ host.

Netsys recommends you keep the default settings.

Figure 4.3 Advanced Setup

Attention: The settings in the following [Chapter 4.4](#) only need to be performed in order to change LAN settings. Such a change may be necessary when connecting the NV-600L/R to a new control PC and/or in order to turn the IP address changed via a shell command into a default address for the next restart of the board.

4.4 Select LAN

The menu below will not be used very often, but when connecting the NV-600L/R to a new control PC, one may want to go through the following steps in order to make the IP address previously set by ifconfig in the console or on some later occasion one may want to change it again without using the console then the menu below will be helpful. In order to set the IP address, click on “LAN Settings”.

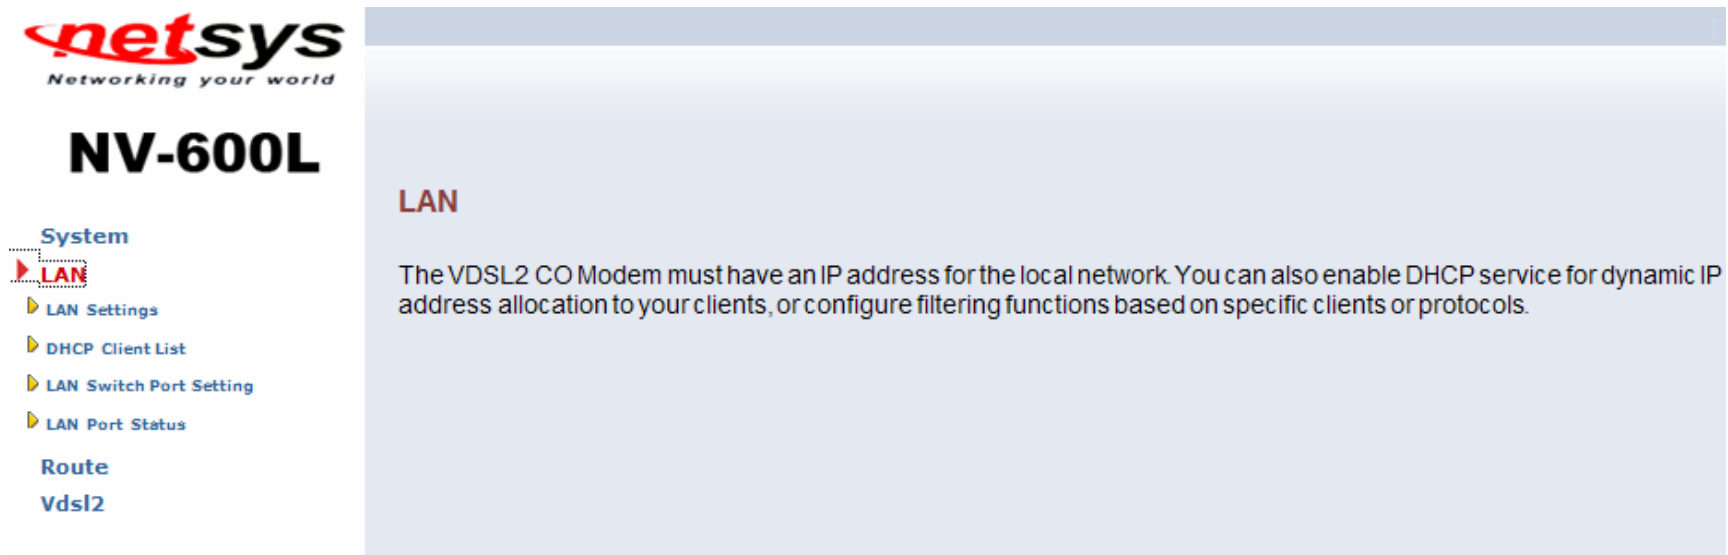


Figure 4.4 LAN menu

4.4.1 Select LAN Settings and set the IP Address

The form below is used to change the IP address of the LAN port “adm0” in the NV-600L/R.

The proposed IP address is either the default address of adm0 or it is the address changed by an ifconfig command via the shell running in the terminal. The Subnet Mask display can be ignored. In case the DHCP checkbox is checked, some additional data and options will be on display (see [Chapter 8.2.5.1](#) on [Page 70](#)). The DHCP server is not required to work with VDSL2 in a lab environment. It recommend to uncheck the box if it is not unchecked already.

NV-600L

System

LAN

- ▶ LAN Settings
- ▶ DHCP Client List
- ▶ LAN Switch Port Setting
- ▶ LAN Port Status

Route

Vdsl2

LAN Settings

You can enable DHCP to dynamically allocate IP addresses to your client PCs.

| | | | | |
|---------------------------------|--|----------------------------------|---------------------------------|----------------------------------|
| IP Address | <input type="text" value="192"/> | <input type="text" value="168"/> | <input type="text" value="16"/> | <input type="text" value="249"/> |
| Subnet Mask | <input type="text" value="255.255.255.0"/> | | | |
| The Gateway acts as DHCP Server | <input checked="" type="checkbox"/> Enable | | | |
| IP Pool Starting Address | <input type="text" value="192.168.16."/> | <input type="text" value="2"/> | | |
| IP Pool Ending Address | <input type="text" value="192.168.16."/> | <input type="text" value="254"/> | | |
| Lease Time | <input type="text" value="Half hour"/> ▼ | | | |
| Local Domain Name | <input type="text"/> (optional) | | | |



NV-600R

System

WAN

LAN

▶ LAN Settings

▶ DHCP Client List

▶ LAN Switch Port Setting

▶ LAN Port Status

NAT

Firewall

Route

UPnP

Vdsl2

LAN Settings

You can enable DHCP to dynamically allocate IP addresses to your client PCs.

IP Address

Subnet Mask

The Gateway acts as DHCP Server ☒ Enable

IP Pool Starting Address

IP Pool Ending Address

Lease Time


Local Domain Name (optional)

Figure 4.4.1 LAN Settings

Now the IP address either may be changed or left as it is. If it has been changed in the form or after it has been changed through console ifconfig command, it needs to be “APPLY” in order to make the displayed IP address new default address.

4.4.2 Restart the Settings Dialog

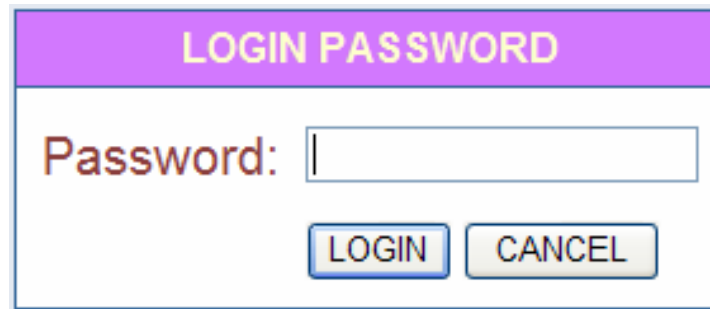After the “APPLY” button has been hit, the displayed IP address “adm0” port will be stored in a non volatile memory on the NV-600L/R. Also, the Ethernet link between the control PC and the NV-600L/R will be re-initialized – even if the IP address has not been changed. Refresh the display of the HTTP browser running on the control PC and login again.



A screenshot of a web-based login dialog box. The title bar is purple with the text "LOGIN PASSWORD" in white. Below the title bar, the word "Password:" is displayed in a large, dark red font. To the right of the text is a white rectangular input field with a blue border. Below the input field are two buttons: "LOGIN" and "CANCEL", both with blue borders and light gray backgrounds.

Figure 4.4.2 Login Password

The NV-600L/R is ready to be controlled by the control PC now.

5. Configure the NV-600L/R via Console

5.1 Setup on Hyperterminal

Open the Hyperterminal and set the baud rate to 115200, 8N1N to properly set the hyperterminal.

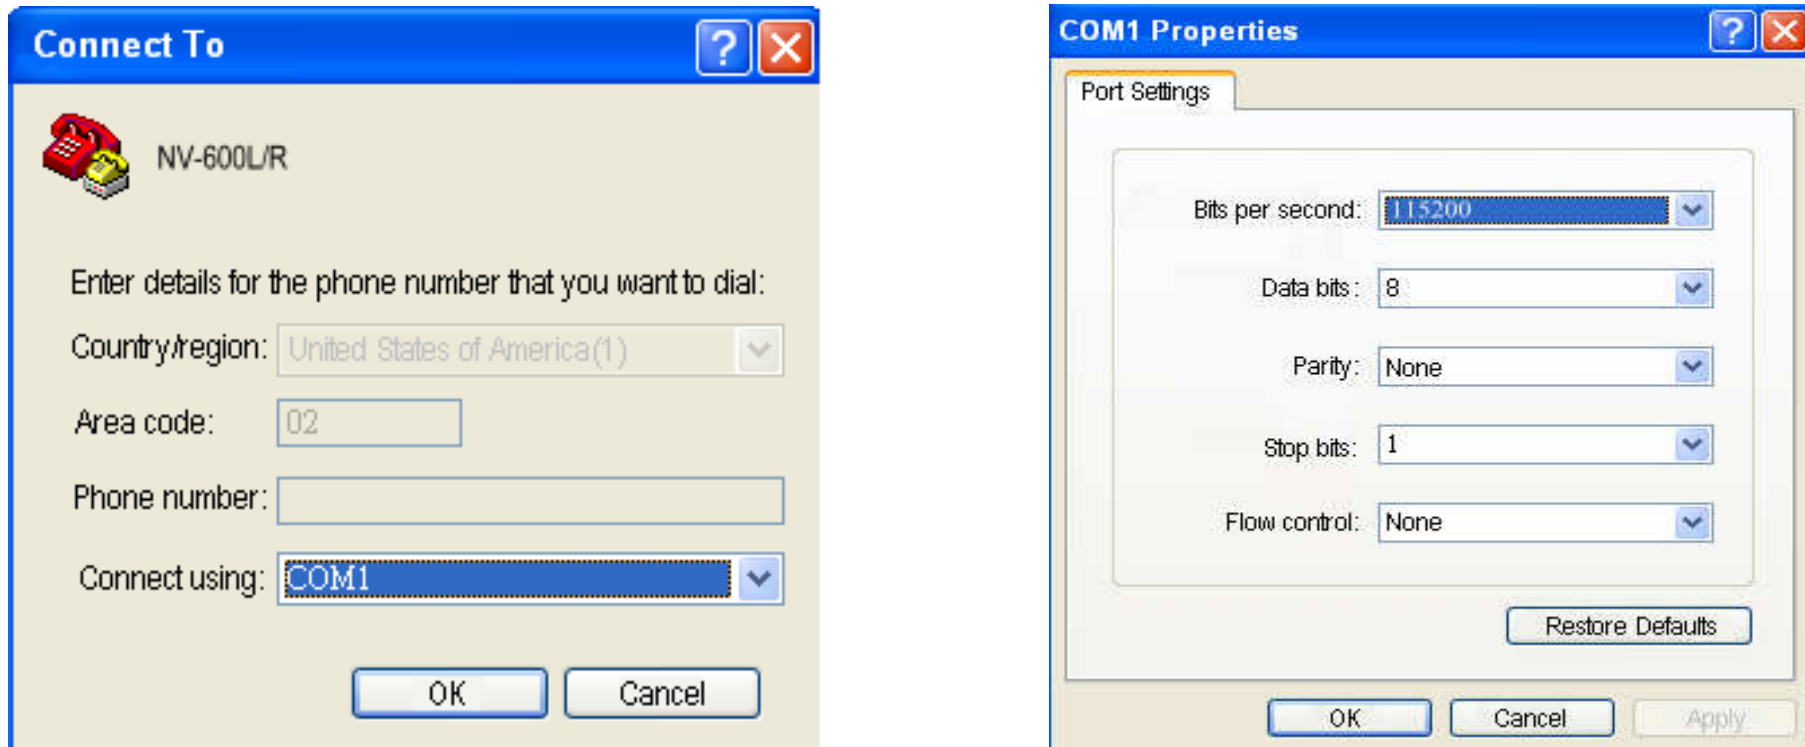


Figure 5 Hyperterminal Configuration

5.2 Reset the system to default configuration.

At the CLI command, write the command “rawaccess -e” to reset the system to default configuration. For it to take effect write the command “reboot” to restart the system.

6. Building a VDSL2 System

First a quick overview on a complete setup of NV-600L/R:

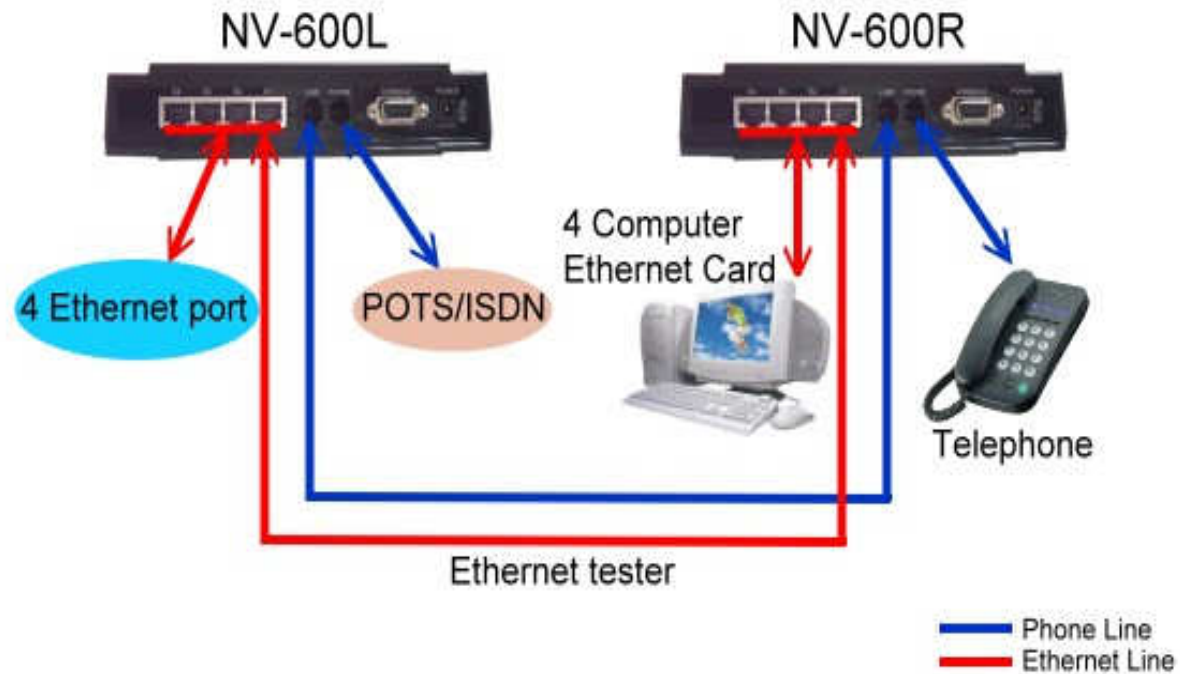


Figure 6 VDSL2 Application

6.1 Connect the NV-600L and the NV-600R to the Line

The objective for VDSL2 is to pass high speed data over a twisted pair cable. In the setup, connects NV-600L to NV-600R through phone wire or line simulator or any other hardware representation of a cable network, with or without noise injection and crosstalk simulations.

6.2 Connect the NV-600L and the NV-600R to LAN Devices

In the setup, usually an Ethernet tester serves as representation of the LAN side as well as representation of the WAN side.

6.3 Run Demos and Tests

The Ethernet tester may send data downstream as well as upstream. It also receives the data in order to check the integrity of the data transmission. Different data rates can be tested under different line conditions.

7. Operating the VDSL2 System

After the VDSL2 system has been set up, one may want to configure the settings that are related to VDSL2. Configuration of operation modes, test modes (loop back) and the display of status information are supported by GUI (Graphical User Interface).


7.1 Configuration Settings

Configure and start the NV-600L (CO) and the NV-600R (CPE).

- Configuration: As a minimum configuration, usually selecting the bandplan is required.
See [Chapter 7.1.3, Profile Configuration](#).
- Next, both sides should be activated from the web interface.
See [Chapter 7.1.6, Line Activation](#)
- The connection status of the link can be monitored.
See [Chapter 7.2.1, Line Status](#)

7.1.1 Channel Configuration

This function is for setting VDSL2 channel.



The screenshot shows the web interface for the NV-600L router. On the left is a navigation menu with the following items: System, WAN, LAN, NAT, Firewall, Route, UPnP, Vdsl2, ChannelConfig (highlighted with a red dashed box), LineConfig, ProfileConfig, LoopBack, ActivateDeactivate, LineStatus, ChannelStatus, VersionInfo, SNRGraph, and BitsGraph. The main content area is titled 'Channel Config' and contains the text 'Configuration of line per bearer basis.' Below this are five configuration fields: 'Channel Number' with a dropdown menu showing 'Channel0', 'Direction' with a dropdown menu showing 'Upstream', 'Min Data Rate' with a text input field containing '64' and a 'kbps' unit label, 'Max Data Rate' with a text input field containing '102400' and a 'kbps' unit label, and 'Max Interleave Delay' with a text input field containing '1' and a 'ms' unit label.

Channel Config

Configuration of line per bearer basis.

Channel Number

Direction

Min Data Rate kbps

Max Data Rate kbps

Max Interleave Delay ms


Figure 7.1.1 Channel Configuration Menu

Interleave delay function is used in digital data transmission technology to protect the transmission against noise issue and data error.

If during transit more than a certain amount of data has been lost then the data cannot be correctly decoded. Short bursts of noise on the line can cause these data packets to become corrupt and the router has to re-request data which in turn can slow down the overall rate at which data is transmitted.

Interleaving is a method of taking data packets, chopping them up into smaller bits and then rearranging them so that once contiguous data is now spaced further apart into a non continuous stream. Data packets are re-assembled by your router.

The diagram below is an example of how interleaved traffic is transmitted.

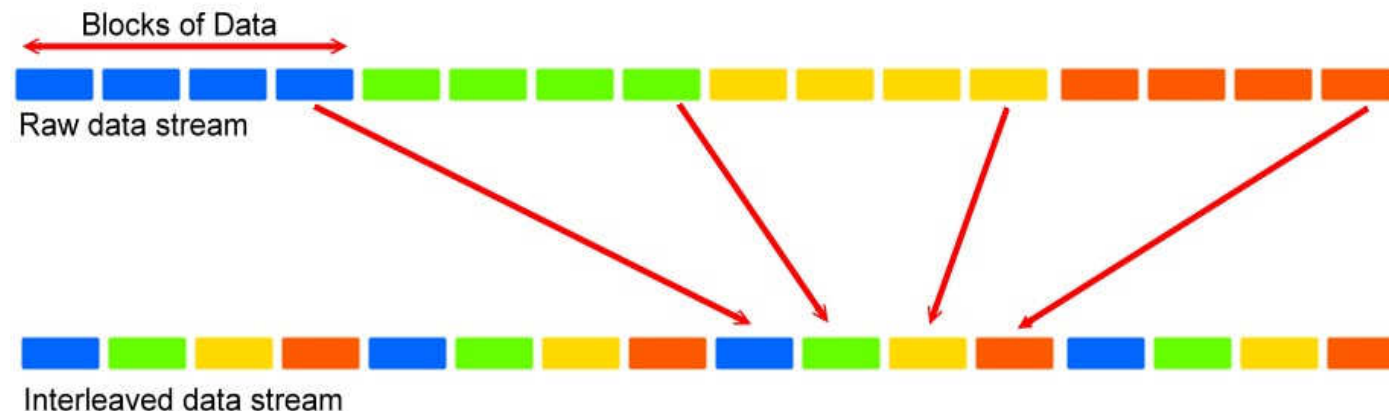

If your line is particularly susceptible to bursts of noise then interleaving should improve your VDSL2 experience simply because if you lose a whole batch of data then this could cause your router to loose sync with the exchange.

Using Interleaving, the router is able to re-assemble the data or if necessary just re-request the part of the data that it is unable to recover. By increasing the interleave depth of each ports that are susceptible to noise, this will improve error performance and stability of marginal lines.

Channel Configuration Settings

| Setting | Description |
|----------------------|--|
| Channel Number | To which bearer channel number shall the settings apply? <ul style="list-style-type: none">• Channel 0 |
| Direction | To which direction shall the settings apply? <ul style="list-style-type: none">• Upstream• Downstream |
| Min Data Rate | Minimum Payload Data Rate |
| Max Data Rate | Maximum Payload Data Rate |
| Max Interleave Delay | Maximum Interleave Delay (set from 0 to 255ms) |

Note: The Reboot is needed for saving the new settings.

7.1.2 Line Configuration

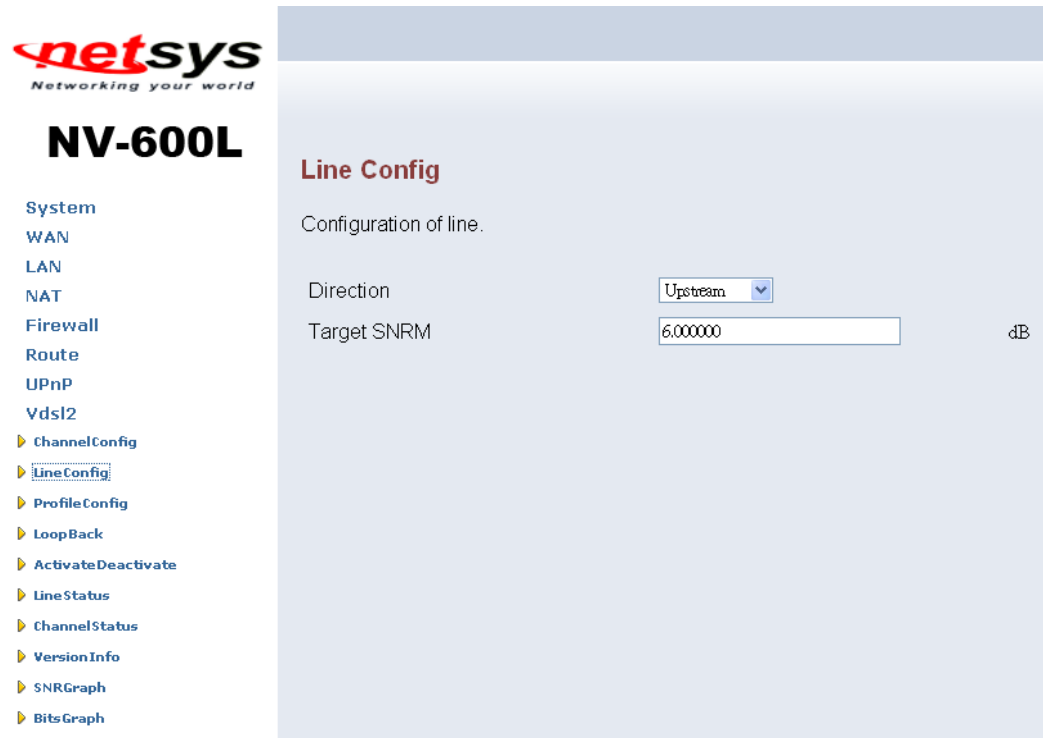


Figure 7.1.2 Line Configuration Menu for SNR Margin Selection

Line Configuration

| Setting | Description |
|-------------|--|
| Direction | Select the target direction. |
| Target SNRM | Set the required SNR Margin *10 (60=6dB) |

7.1.3 Profile Configuration

For this function, NV-600L/R provides world wide telecom standard band plan, such as meet European telecom standard band plan 998(17a), USA telecom standard band plan 997(8a, 8b) and APAC Telecom standard band plan (30a) etc.

Annex A specifies bandplans for the North American region and enables NV-600 to be deployed with traditional POTS telephony or in an all-digital mode. Annex B specifies bandplans for Europe and enables NV-600 deployment with underlying POTS and ISDN services. Annex C allows NV-600 to coexist with TCM-ISDN services, found primarily in APAC.

NV-600 has numerous configuration profiles and bandplans to meet regional service provider requirements. The frequency bandwidth has increased to 30 MHz, with configuration options at 8.5 MHz, 12 MHz, 17.7 MHz and 30 MHz.

Band profile and band plan can only be configured at NV-600L as NV-600R will auto-follow up on the settings of NV-600L. The only thing that NV-600R must be configured so that the routers will link is the tone mode. However, the default tone mode for NV-600L/R is V43, so at default there's no need to change the tone mode unless it is required by the telecom companies to use different tone mode. Another important thing is that band profile and band plan setting must be compatible to each other if not access error will show when applied. Please deactivate and activate once the setting has been changed.



NV-600L

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ SNRGraph

▶ BitsGraph

Profile Config

Configuration of line for specific band plans.

Profile

Vdsl2 Profile17a ▼

Band Plan

Annex B 998-M2x-M (B11) ▼

Filter

Additional Filter Off ▼

ToneMode

V43 ▼

Figure 7.1.3.1 NV-600L Profile Configuration



NV-600R

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ **ProfileConfig**

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ SNRGraph

▶ BitsGraph

Profile Config

Configuration of line for specific band plans.

Filter

Additional Filter Off

ToneMode

V43

Figure 7.1.3.2 NV-600R Profile Configuration



Figure 7.1.3.3 Band Profile and Plan Setup Error

| Profile Region | 8a US | 8b EU | 8c US | 8d all | 12a all | 12b all | 17a EU/US | 30a APAC |
|--------------------|----------|----------|----------|-----------|------------|------------|--------------|-------------|
| Bandwidth (MHz) | 8.832 | 8.832 | 8.500 | 8.832 | 12.000 | 12.000 | 17.664 | 30.000 |
| Tones | 2047 | 2047 | 1971 | 2047 | 2782 | 2782 | 4095 | 3478 |
| Tone Spacing (kHz) | 4.3125 | 4.3125 | 4.3125 | 4.3125 | 4.3125 | 4.3125 | 4.3125 | 8.625 |
| Line Power (dBm) | +17.5 | +20.5 | +11.5 | +14.5 | +14.5 | +14.5 | +14.5 | +14.5 |
| Netsys(Infineon) | Yes | Yes | Yes | Yes | Yes | Yes | Yes | Yes |
| Competitor A | No | No | Yes | Yes | ? | Yes | No | No |
| Competitor B | Yes | No | Yes | Yes | Yes | Yes | CO only | No |

Figure 7.1.3.4 Band Profile Region

The following shows the band profile and band plan compatibility:

| | Band Profile List | | Band Plan List |
|----------|--------------------------|-----------|----------------------------|
| 0 | VDSL2 Profile8a | 0 | Annex A M1_EU32 |
| 1 | VDSL2 Profile8b | 1 | Annex A M9_EU64 |
| 2 | VDSL2 Profile8c | 8 | Annex B 997-M2x-A (B05) |
| 3 | VDSL2 Profile8d | 9 | Annex B 997-M2x-M (B06) |
| 4 | VDSL2 Profile12a | 10 | Annex B 997-M1c-A-7 (B07) |
| 5 | VDSL2 Profile12b | 11 | Annex B 998-M1x-B (B08) |
| 6 | VDSL2 Profile17a | 13 | Annex B 998-M2x-A (B10) |
| 7 | VDSL2 Profile30a | 14 | Annex B 998-M2x-M (B11) |
| 8 | VDSL2 Profile17b | 16 | Annex B 998-M2x-B (B12) |
| | | 18 | Annex B 998-M2x-NUS0 (B13) |
| | | 20 | Annex C |
| | | 21 | Annex C_8K |
| | | 22 | Annex B 997-M2x-NUS0 |
| | | 23 | Annex C 1M1 |
| | | 24 | Annex C_8K 1M1 |
| | | 25 | Annex B 998E17-M2x-A |
| | | 26 | Annex B 998E17-M2x-NUS0 |

| Band Profile \ Band Plan | 0 | 1 | 8 | 9 | 10 | 11 | 13 | 14 | 16 | 18 | 20 | 21 | 22 | 23 | 24 | 25 | 26 |
|--------------------------|---|---|---|---|----|----|----|----|----|----|----|----|----|----|----|----|----|
| 0 | O | O | O | O | O | O | O | O | O | X | X | X | X | X | X | X | X |
| 1 | O | O | O | O | O | O | O | O | O | X | X | X | X | X | X | X | X |
| 2 | X | X | O | X | O | X | X | O | X | X | X | X | X | X | X | X | X |
| 3 | O | O | O | X | O | O | O | O | O | X | X | X | X | X | X | X | X |
| 4 | O | O | O | O | O | O | O | O | O | X | X | X | X | X | X | X | X |
| 5 | O | O | X | X | O | O | O | O | O | O | X | X | X | X | X | X | X |
| 6 | O | X | X | X | O | O | O | O | O | X | O | X | X | O | X | X | O |
| 7 | O | X | X | X | X | X | X | X | X | X | X | O | O | X | O | X | X |
| 8 | X | X | X | X | X | X | X | O | O | X | X | X | X | X | X | O | X |

Note: O = Compatible; X = Not Compatible

The following phone cable distance and data rates are possible according to the band profile and band plan setup:

Default plan profile and band plan = 30a and C8K

At distance 0-350m, data rates are at 100Mbps for both downstream and upstream

350-450m, data rates are at 70-85/40Mbps for downstream/upstream

450-600m at 40-60/10Mbps for downstream/upstream

600-900m at 20-40/1-5Mbps for downstream/upstream

Note: Using Band profile 30a and band plan C8K for distances beyond 900m is not recommended

Alternative band profile and band plan = 8d and M1_EU32

At distance 0-800m, data rates are at 60-80/15Mbps for both downstream/upstream.

800-1200m, data rates are at 30-50/5-10Mbps for downstream/upstream

1200-1500m, data rates are at 30/2-5Mbps for downstream/upstream

Note: Using Band profile 8d and band plan M1_EU32 for distances beyond 1500m is not recommended

Additional: Downstream: Traffic from Transmitter to Receiver

Upstream: Traffic from Receiver to Transmitter

7.1.4 Loop Back

The loop back testing function for checking phone wire link problem: 1. System Loop. 2. Line Side Loop

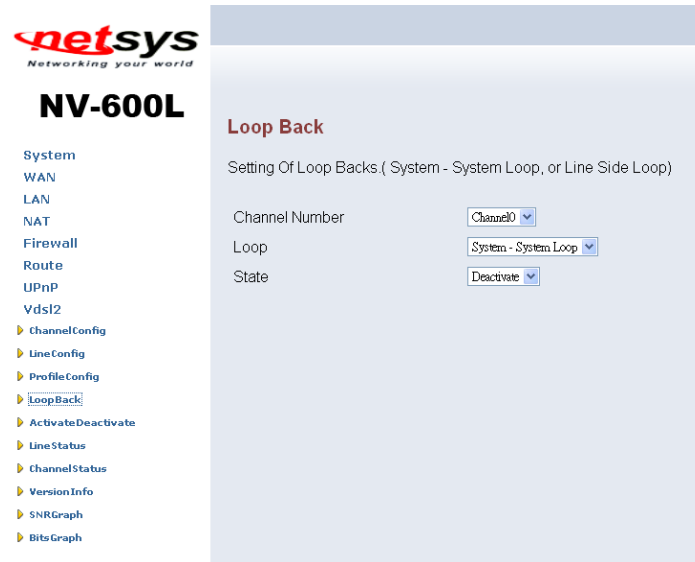


Figure 7.1.4 Loop Back Activation/Deactivation Menu

Loop Back

| Setting | Description |
|-------------|--|
| Channel No. | To which bearer channel number shall the settings apply? Channel 0 |
| Loop | System loop or line side loop |
| State | Activate or deactivate loop back within the transmission convergence layer |

7.1.5 Line Activation

This function is for enable/disable VDSL2 port.



Figure 7.1.5 Activation and Deactivation of the Line

Line Activation/Deactivation

| Setting | Description |
|---------|--|
| Line | Activate or deactivate the line. (Select the activity and the press the APPLY button.) |

7.2 Status Displays

7.2.1 Line Status

This function provides SNR value for checking phone wiring quality.

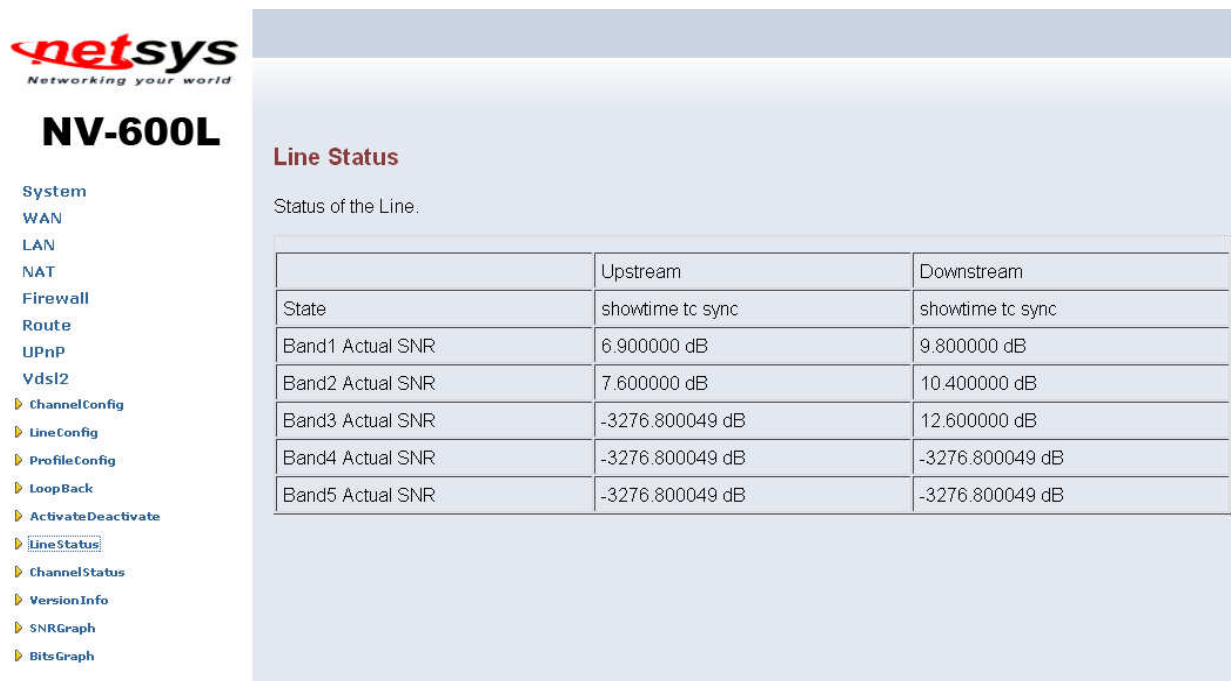


Figure 7.2.1 Line Status Display: Actual SNR

The following status messages may occur: not_initialized, exception, idle request, idle, silent request, silent, handshake, full init, discovery, training, analysis, exchange, showtime no sync, showtime tc sync, fast retrain, lowpower l2, loopdiagnostic, loopdiagnostic complete, resync, test, lowpower l3, unknown.

7.2.2 Channel Status

This function shows VDSL2 port status.



NV-600L

- System
- WAN
- LAN
- NAT
- Firewall
- Route
- UPnP
- Vdsl2
 - ▶ ChannelConfig
 - ▶ LineConfig
 - ▶ ProfileConfig
 - ▶ LoopBack
 - ▶ ActivateDeactivate
 - ▶ LineStatus
 - ▶ **ChannelStatus**
 - ▶ VersionInfo
 - ▶ SNRGraph
 - ▶ BitsGraph

Channel Status

Status of the bearer .

| | | |
|-------------------------|------------------|------------------|
| Channel Number | Channel0 ▾ | |
| | Upstream | Downstream |
| Actual Data Rate | 38400 kbps | 102384 kbps |
| Actual Interleave Delay | 0.000000 ms | 0.000000 ms |
| Total CRC Count | 1201 | 0 |
| Total FEC Count | 6 | 0 |
| Actual INP | 0.000000 Symbols | 0.000000 Symbols |

Figure 7.2.2 Channel Status Display: Data Rate, Delay, Error Counters and Impulse Noise Protection

7.2.3 Version Info

This function shows hardware and firmware version.



netsys
Networking your world

NV-600L

System
WAN
LAN
NAT
Firewall
Route
UPnP
Vdsl2
▶ ChannelConfig
▶ LineConfig
▶ ProfileConfig
▶ LoopBack
▶ ActivateDeactivate
▶ LineStatus
▶ ChannelStatus
▶ **VersionInfo**
▶ SNRGraph
▶ BitsGraph

Home | Logout

Version Info

Version Numbers.

| | |
|-------------------------|----------------|
| Web Interface Version | D 4.3 |
| DSL API Library Version | 2.0.12 |
| Chip Set FW Version | 9.7.3.11.0.2 |
| Chip Set HW Version | VINAX-DFE_V1.4 |
| DSL Driver Version | 0.1.4.8 |

Figure 7.2.3 Display of Version Data

7.2.4 SNR Graphs

When NV-600L link with NV-600R, this graph will show the SNR value for each band.



NV-600L

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ **SNRGraph**

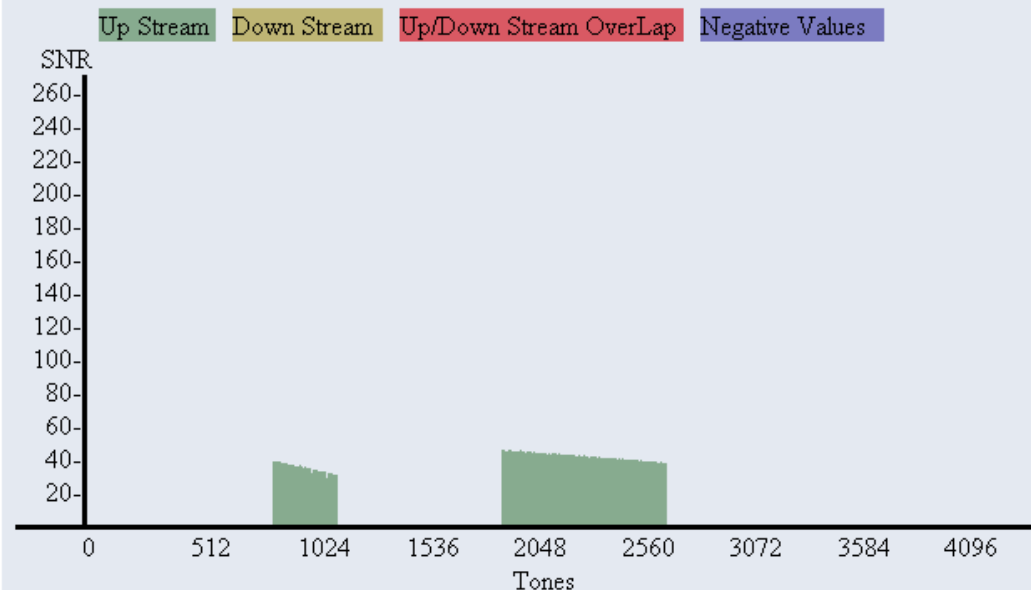
▶ BitsGraph

Update

Expand Graph

Show Raw Values

SNR Per Tone Graph





NV-600R

System

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

▶ ChannelConfig

▶ LineConfig

▶ ProfileConfig

▶ LoopBack

▶ ActivateDeactivate

▶ LineStatus

▶ ChannelStatus

▶ VersionInfo

▶ **SNRGraph**

▶ BitsGraph

Update

Expand Graph

Show Raw Values

SNR Per Tone Graph

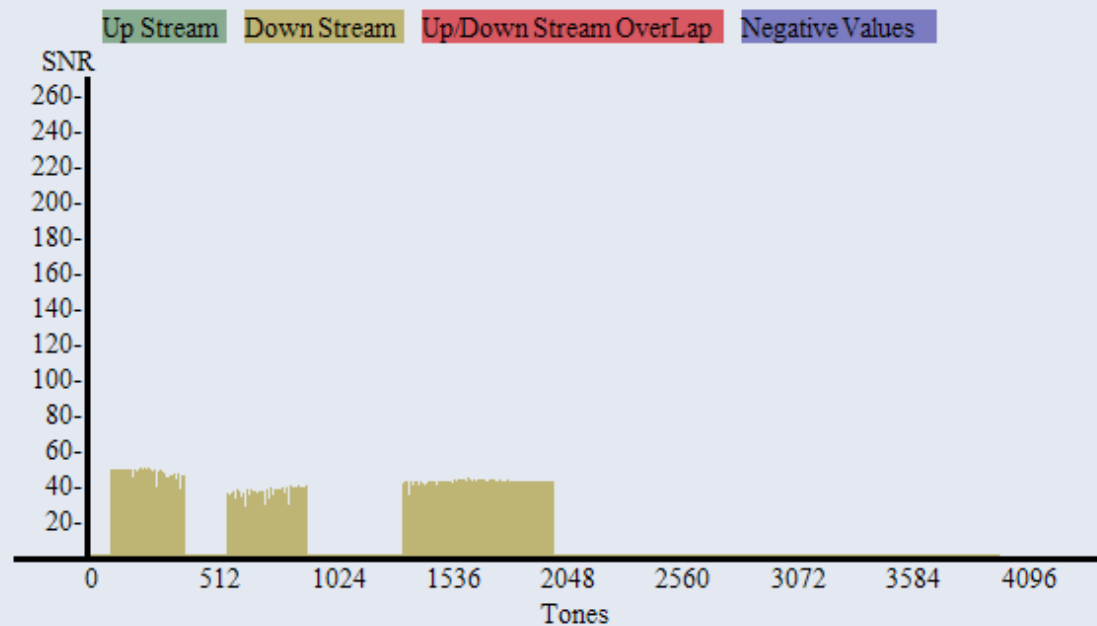


Figure 7.2.4 Display of SNR per Carrier

7.2.5 BitsGraphs

When NV-600L link with NV-600R, this graph will show the bits value for each tone.

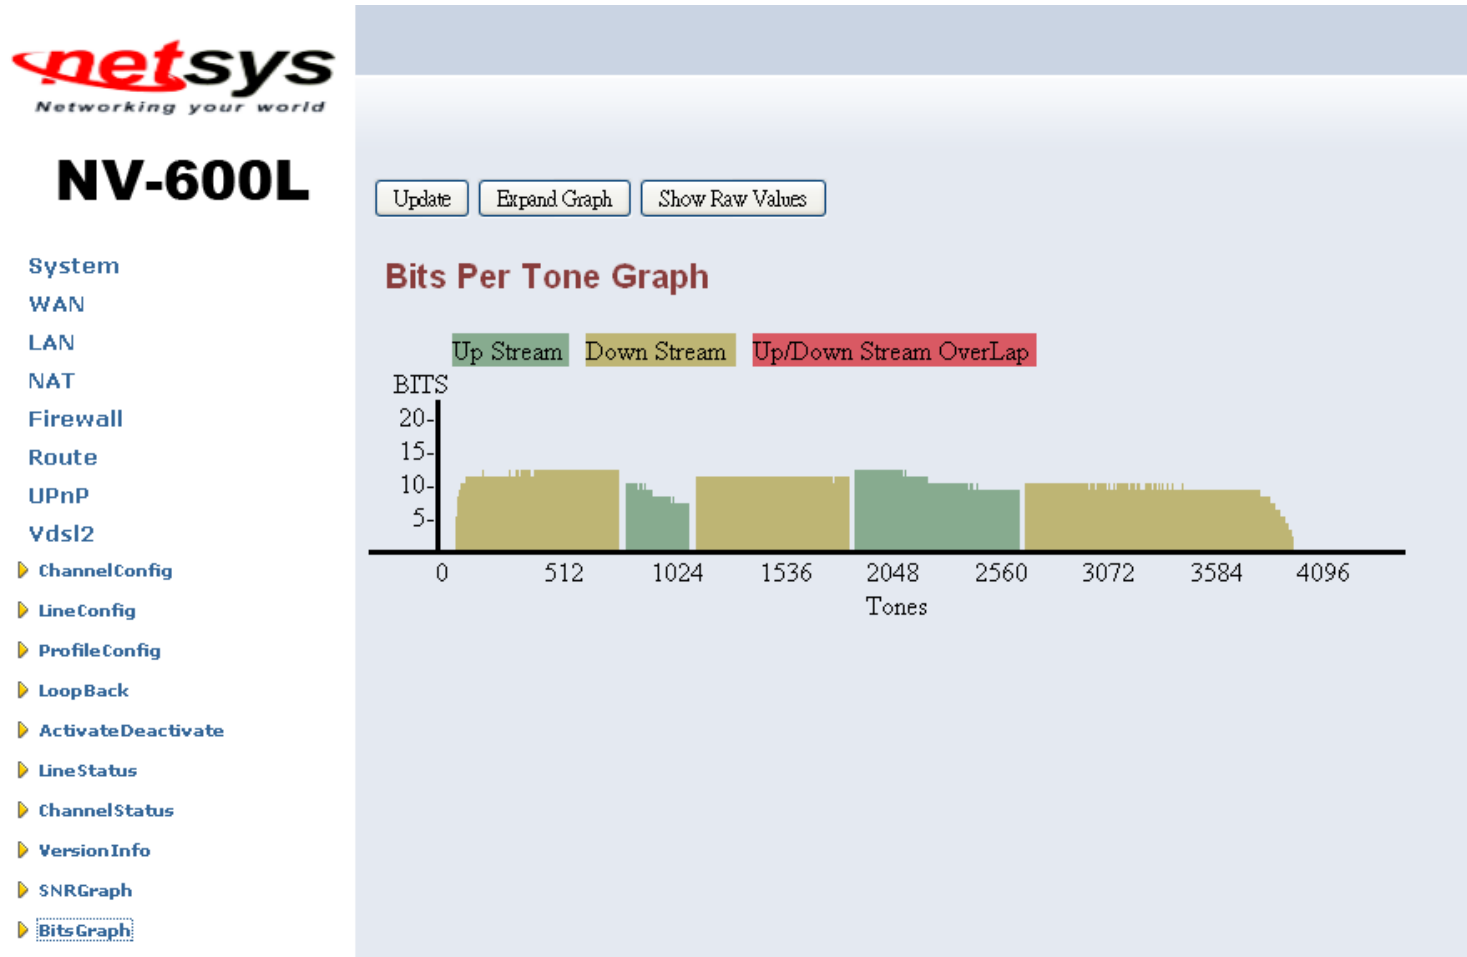


Figure 7.2.5 Display Bits Per Tone Graph

8. Configuration Interface of the Router

This section explains how to configure the router section of the NV-600L/R using its web-based configuration.

The part of the circuitry as well as the router configuration menu has been ported from that of the reference kit to the NV-600L/R reference board. As for the menu, there are only a few differences:

- The “adm1” port now is the port to the VDSL2 side. The port on the LAN is “adm0”. It supports four Ethernet connections.
- The IP addresses are used in this chapter are different from the examples in the previous chapters.
- The password used in this chapter is different from the examples in the previous chapters.

8.1 Logging in to the NV-600L/R

To log on to the NV-600L/R Web Application, you must have a valid password. The Administrator creates the log on user with its password. When one log on to the NV-600L/R Web Application, the LOGIN PASSWORD window is displayed as shown in [Figure 8.1](#).

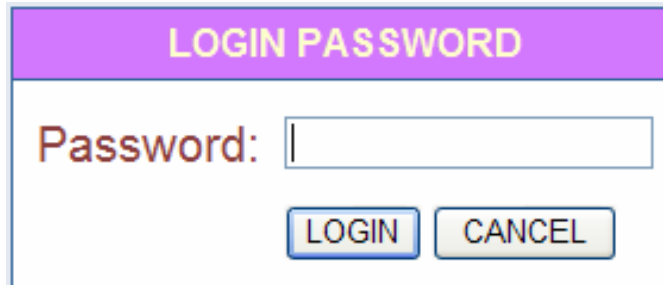


Figure 8.1 NV-600L/R Web Application

In the LOGIN PASSWORD window:

1. Enter the password in the Password text box. For an Admin user, the default password is “[admin](#)”.
2. Click LOGIN to begin the configuration or click CANCEL in the LOGIN PASSWORD window to cancel this log on operation.

8.2 Setup Wizard and Advanced Setup

There is an easy Setup Wizard for end users at the NVF-200R side and an Advanced Setup for more detail configurations for both NV-600L/R. This manual gives importance to the Advanced Setup.

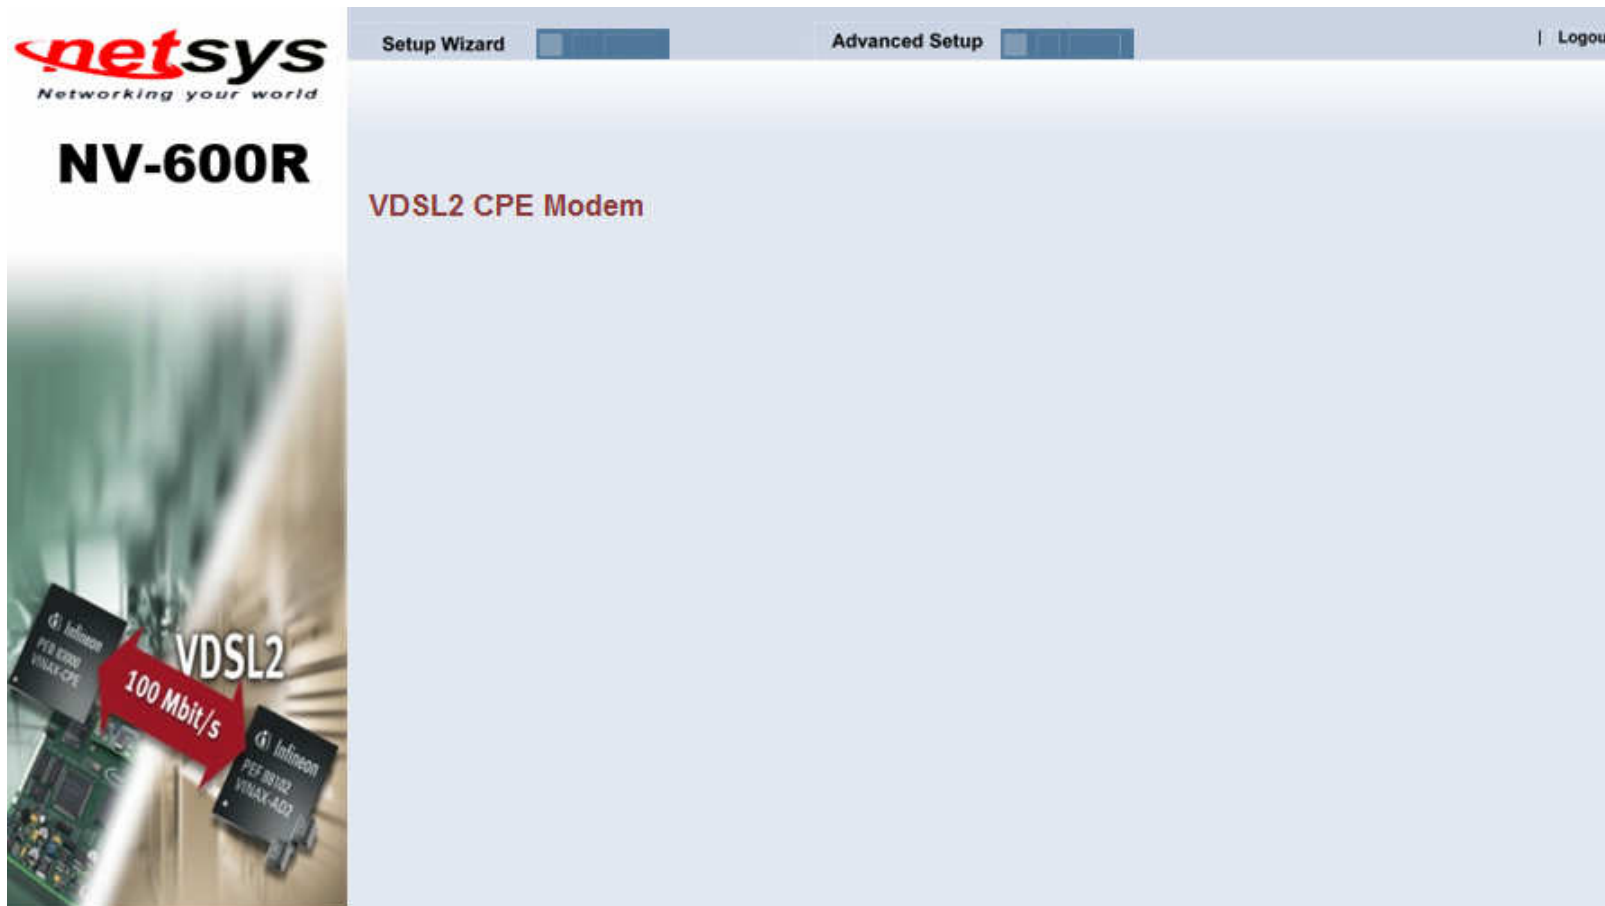


Figure 8.2 Select the Advanced Setup in the Entry Screen

8.2.1 Setup Wizard

The Setup Wizard is designed for ease-of-use in order to quickly configure the most common settings. The Admin can view the Setup Wizard link in the homepage. The wizard first step is to allow the admin to configure the system host settings displayed as shown in [Figure 8.2.1](#).



The screenshot shows the netsys logo and 'NV-600R' model name. On the left, a vertical list of steps is shown: '1. Host Settings' (selected with a yellow checkmark), '2. WAN Type', '3. WAN Settings', and '4. DNS'. The main area is titled '1. Host Settings' and contains two text input fields: 'Host Name' with the value 'VDSL2_CPE_modem' and 'Domain Name' with the value 'vds12.com.tw'. Below these fields, a note reads: 'Enter the unique host name for the , and the domain name of your organization.'

Figure 8.2.1 Setup Wizard's First Step

There are four steps to complete the wizard. Follow the instructions given in each step and enter the desired settings.

8.2.2 Advanced Setup

Click on the Advanced Setup link in the homepage in case you want to configure a wider range of settings. Router setup are only located at NV-600R. So the WAN, NAT, Firewall and UPnP are only seen at NV-600 advanced setup menu. The following configuration options are displayed in the left navigation bar, as shown in [Figure 8.2.2](#).

- System
- WAN (NV-600R only)
- LAN
- NAT (NV-600R only)
- Firewall (NV-600R only)
- Route
- UPnP (NV-600R only)
- VDSL2



NV-600L

System

LAN

Route

Vdsl2

Advanced Setup

The VDSL2 CO Modem supports advanced functions like hacker attack detection, client filtering, virtual servers, special application access, and a virtual DMZ host.

Netsys recommends you keep the default settings.



NV-600R

► **System**

WAN

LAN

NAT

Firewall

Route

UPnP

Vdsl2

Advanced Setup

The VDSL2 CPE Modem supports advanced functions like hacker attack detection, client filtering, virtual servers, special application access, and a virtual DMZ host.

Netsys recommends you keep the default settings.

Figure 8.2.2 Advanced Setup

8.2.3 System

The System link can be viewed in the left navigation bar. The following are the options available under System, as shown in [Figure 8.2.3](#).

- Administrator Settings
- Firmware Upgrade
- Device Mode (NV-600R only)
- System Status
- Reboot
- Reset System



NV-600L


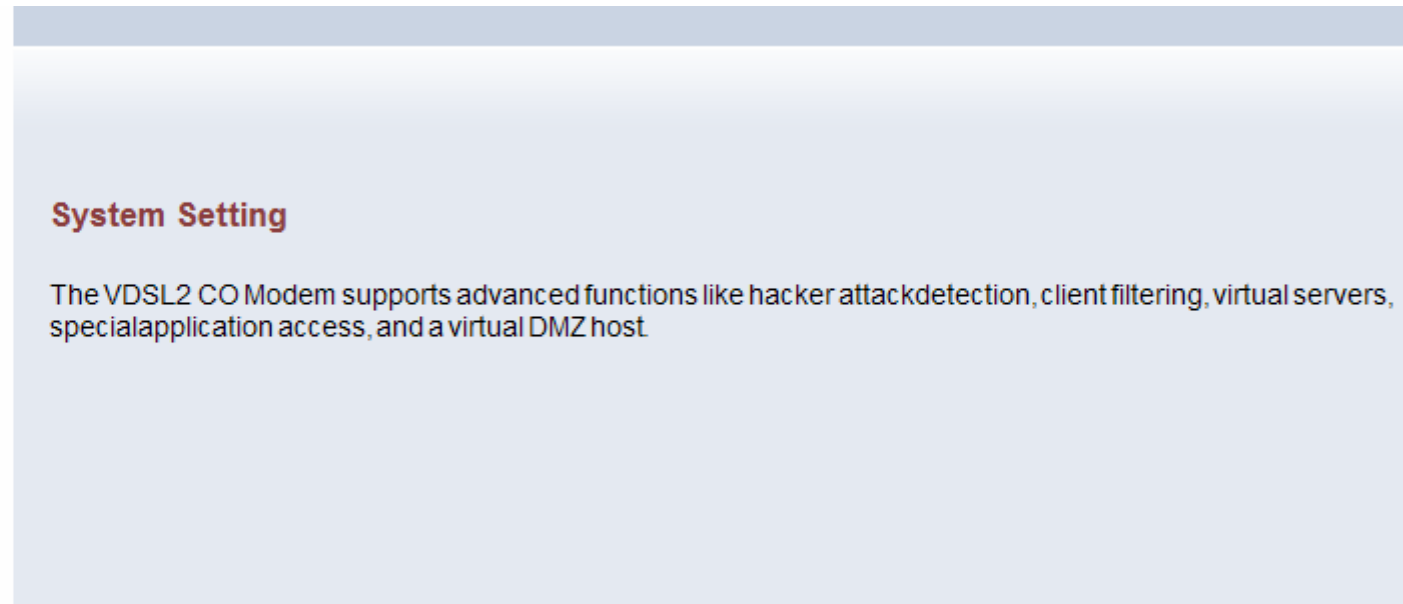
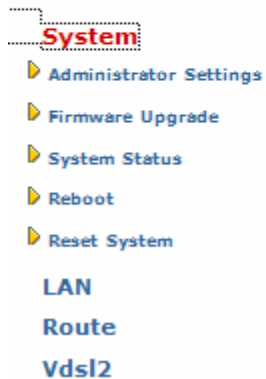


Figure 8.2.3 System in the Left Navigator Bar

8.2.3.1 Administrator Settings

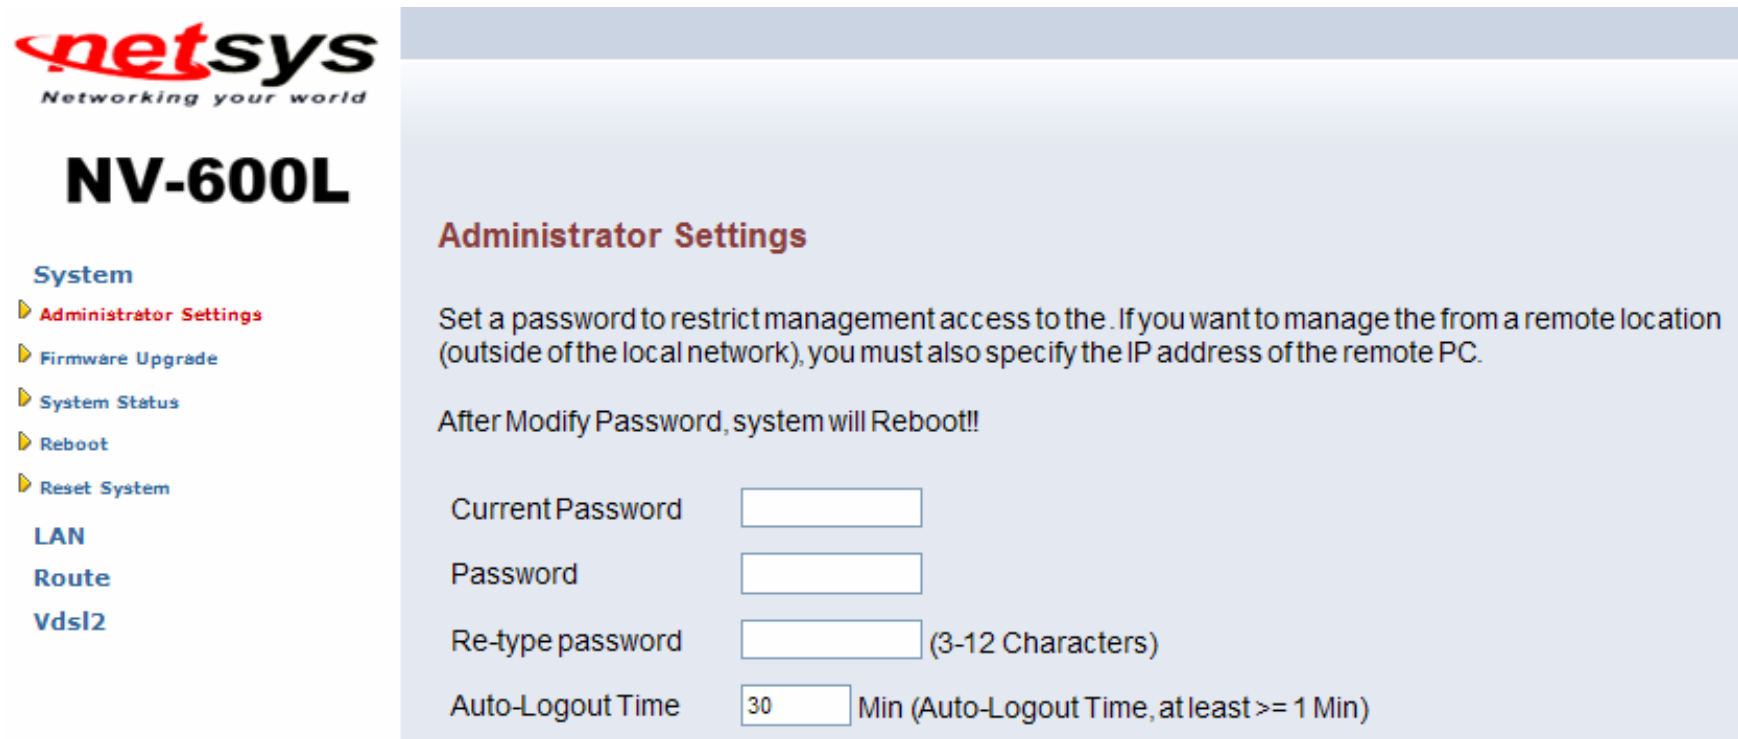To add a user or change user's password, click on the Administrator Settings link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.1](#).



netsys
Networking your world

NV-600L

System

- ▶ **Administrator Settings**
- ▶ Firmware Upgrade
- ▶ System Status
- ▶ Reboot
- ▶ Reset System

LAN

Route

Vdsl2

Administrator Settings

Set a password to restrict management access to the . If you want to manage the from a remote location (outside of the local network), you must also specify the IP address of the remote PC.

After Modify Password, system will Reboot!!

Current Password

Password

Re-type password (3-12 Characters)

Auto-Logout Time Min (Auto-Logout Time, at least >= 1 Min)

Figure 8.2.3.1 Administrator Settings Configuration

While adding a user, each user must assign a separate port. Hence the number of users that can be added to the system depends on the number of ports available on the NV-600L/R.

The screen contains the following details:

Fields in User Setting

| Field | Description |
|------------------|--|
| Current Password | This is the password associated with the administrator. This is enabled only for the user Administrator login. |
| Password | This is the password of the login administrator. |
| Re-type Password | This is the password verification. |
| Auto-Logout Time | The auto-logout time, at least one minute. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.3.2 Firmware Upgrade

To update the system firmware, click on the Firmware Upgrade link in the left navigation bar. A screen is displayed as shown in 8.2.3.2

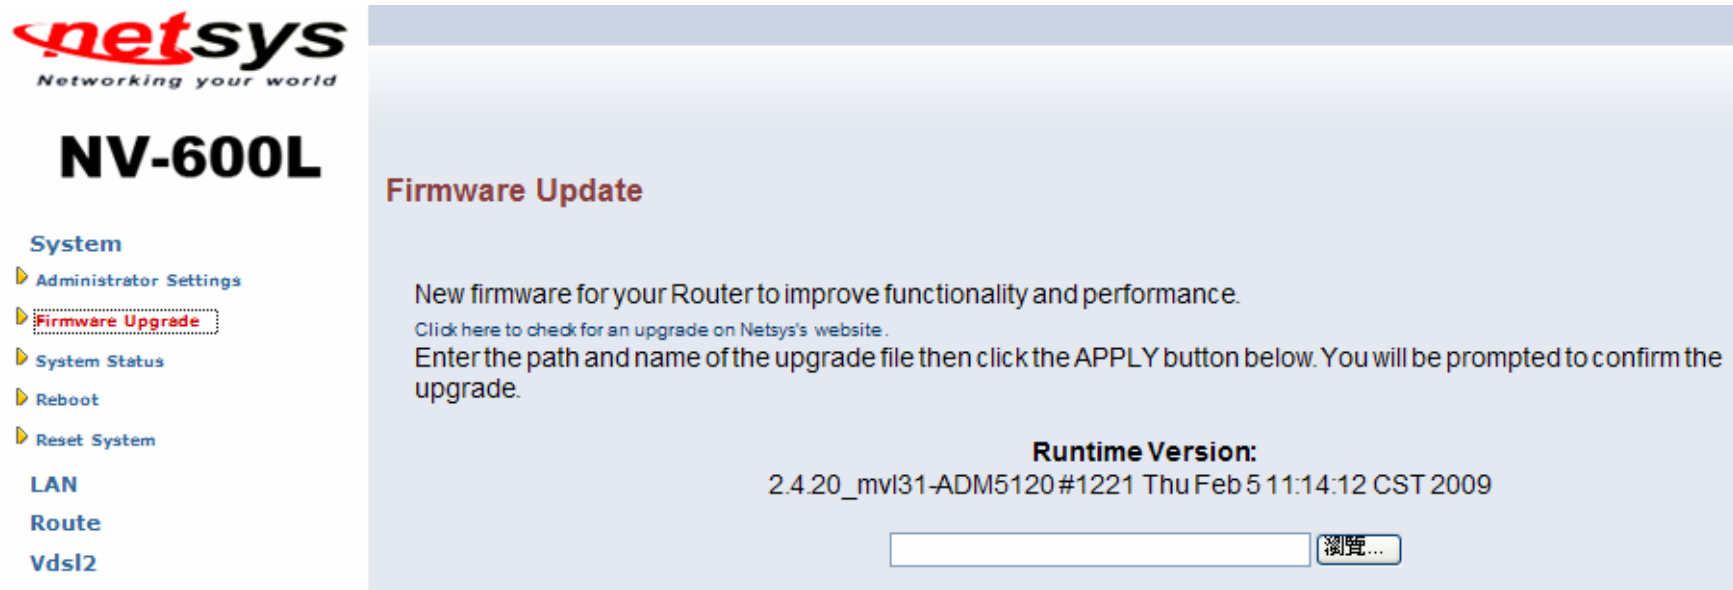


Figure 8.2.3.2 Firmware Update

The screen contains the following detail:

- Click APPLY to start the firmware update.
- Click Browse to select a specified file name to change the File Name.

8.2.3.3 Device Mode

The ADM5120 network processor used in the reference system is able to act as either a switch or a router. Clicking on Device Mode on the left navigation bar allows the user to change the mode of operation, as shown in the following figure.


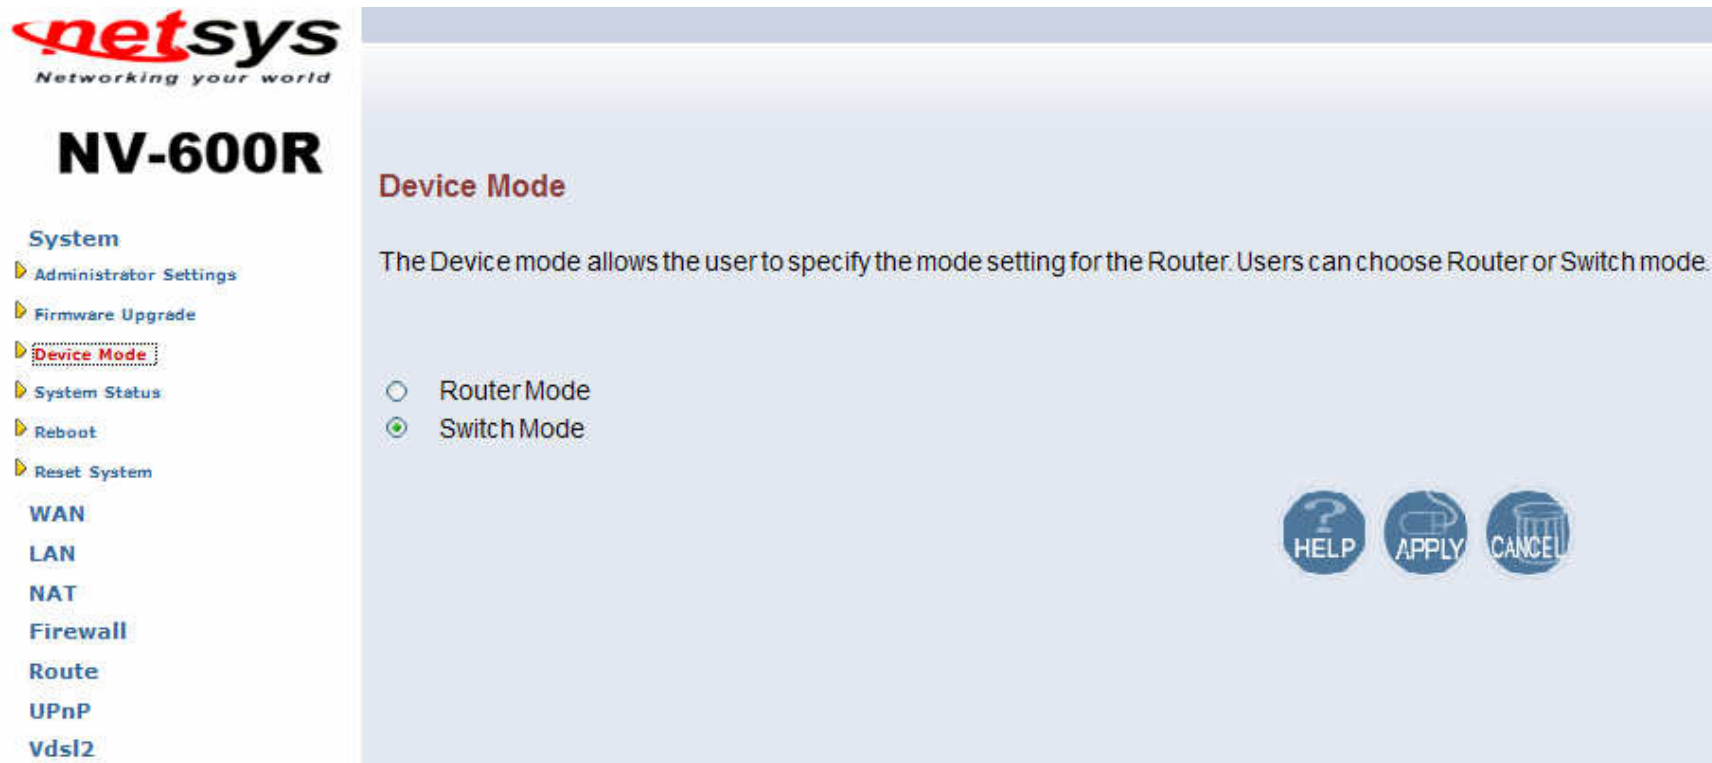


Figure 8.2.3.3 Device Mode

The default setting is in Switch mode, it is not necessary to change the setting in most of the case. In situations, which devices (e.g. PC, Server, VoIP) connected to CPE requires Router function. Hence, set the CPE on Router mode.

8.2.3.4 System Status

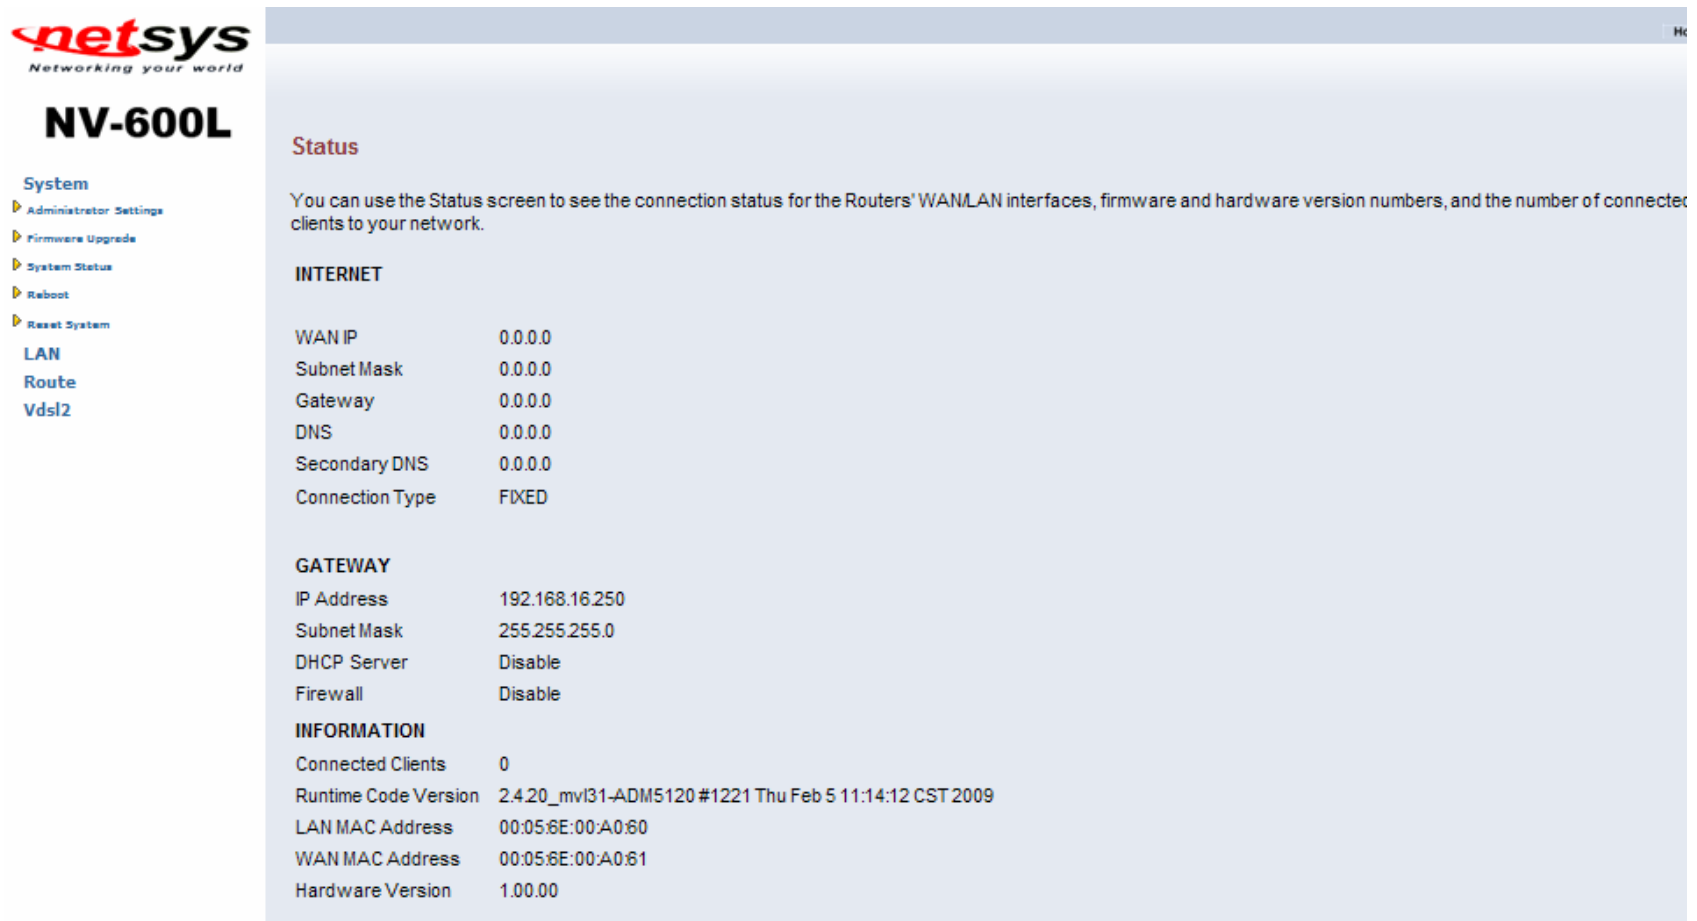To view system status, click on the System Status link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.4](#)



netsys
Networking your world

NV-600L

System

- Administrator Settings
- Firmware Upgrade
- System Status
- Reboot
- Reset System

LAN

Route

Vdsl2

Status

You can use the Status screen to see the connection status for the Routers' WAN/LAN interfaces, firmware and hardware version numbers, and the number of connected clients to your network.

INTERNET

| | |
|-----------------|---------|
| WAN IP | 0.0.0.0 |
| Subnet Mask | 0.0.0.0 |
| Gateway | 0.0.0.0 |
| DNS | 0.0.0.0 |
| Secondary DNS | 0.0.0.0 |
| Connection Type | FIXED |

GATEWAY

| | |
|-------------|----------------|
| IP Address | 192.168.16.250 |
| Subnet Mask | 255.255.255.0 |
| DHCP Server | Disable |
| Firewall | Disable |

INFORMATION

| | |
|----------------------|--|
| Connected Clients | 0 |
| Runtime Code Version | 2.4.20_mv131-ADM5120 #1221 Thu Feb 5 11:14:12 CST 2009 |
| LAN MAC Address | 00:05:6E:00:A0:60 |
| WAN MAC Address | 00:05:6E:00:A0:61 |
| Hardware Version | 1.00.00 |

Figure 8.2.3.4 Status Window

8.2.3.5 Reboot

To reboot the unit, click on the Reboot link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.5](#).

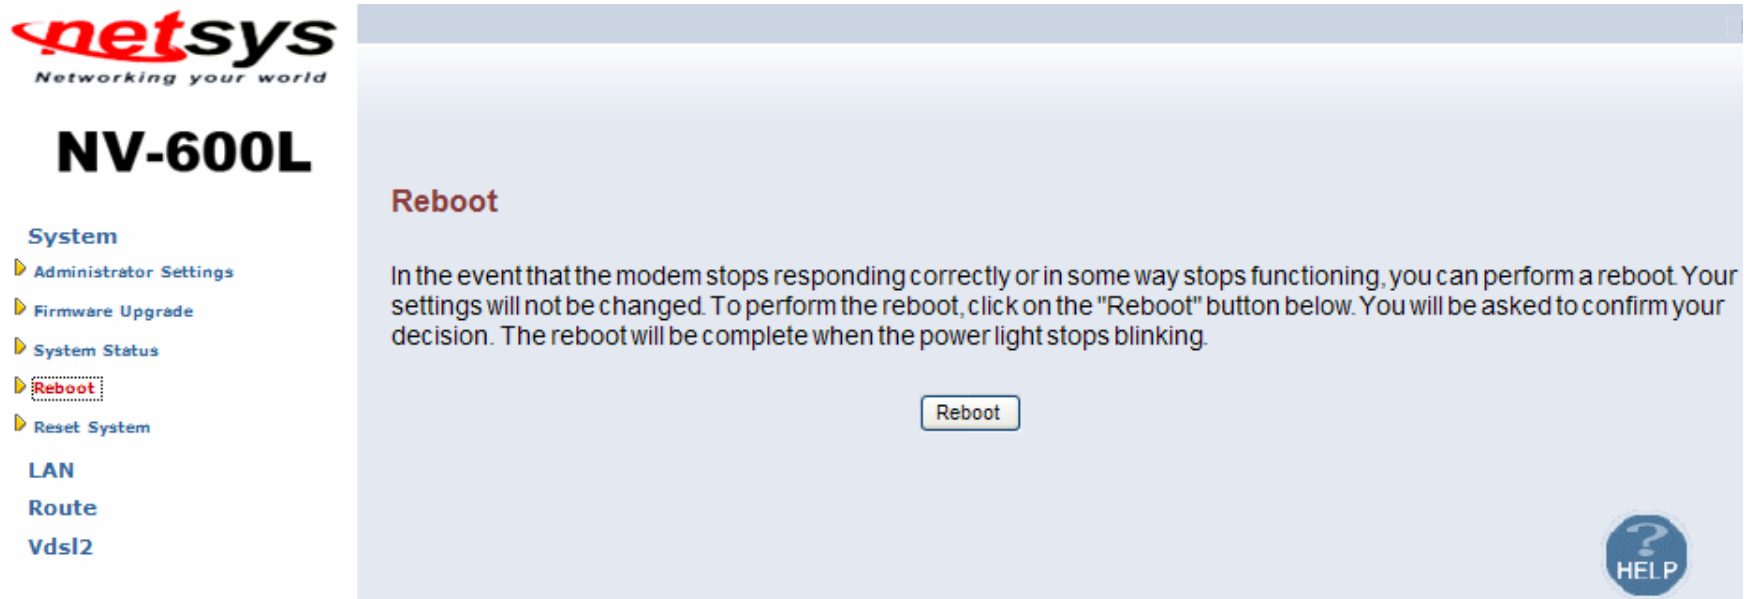


Figure 8.2.3.5 Reboot NV-600L/R Router

- Click Reboot to restart the unit.

8.2.3.6 Reset system

To reset the system, click on the Reset link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.3.6](#).

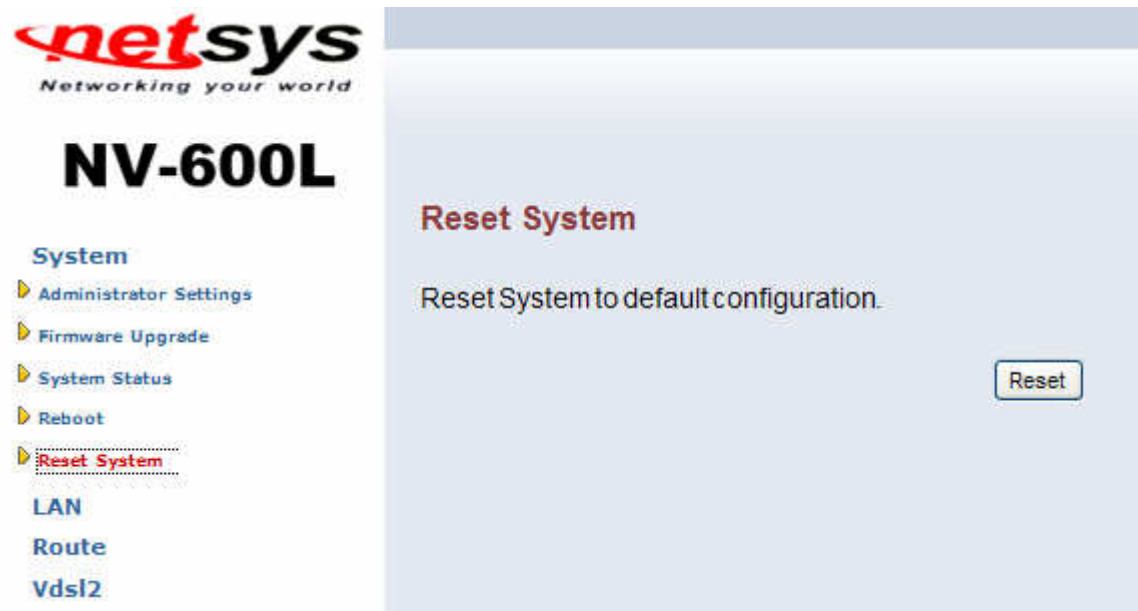


Figure 8.2.3.6 Reset NV-600L/R Router

- Click Reset to restart the system to default configuration.

8.2.4 WAN

The WAN settings can be viewed in the left navigation bar of NV-600R only. The following are the options available under WAN, as shown [Figure 8.2.4](#):

- Dynamic IP
- IP Settings
- PPPoE
- DNS



NV-600R

System

WAN

Dynamic IP

IP Settings

PPPoE

DNS

LAN

NAT

Firewall

Route

UPnP

Vdsl2

WAN

The Device can be connected to your service provider in any of the following ways:

- | | |
|--|--|
| <input type="radio"/> Dynamic IP Address | Obtain an IP address automatically from your service provider. |
| <input checked="" type="radio"/> Static IP Address | Uses a static IP address. Your service provider gives a static IP address to access Internet services. |
| <input type="radio"/> PPPoE | PPP over Ethernet is a common connection method used for xDSL. |

Figure 8.2.4 WAN Setting in Left Navigator Bar

8.2.4.1 Dynamic IP

To configure the WAN interface to dynamically obtain an IP Address, click on the Dynamic IP link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.1](#).

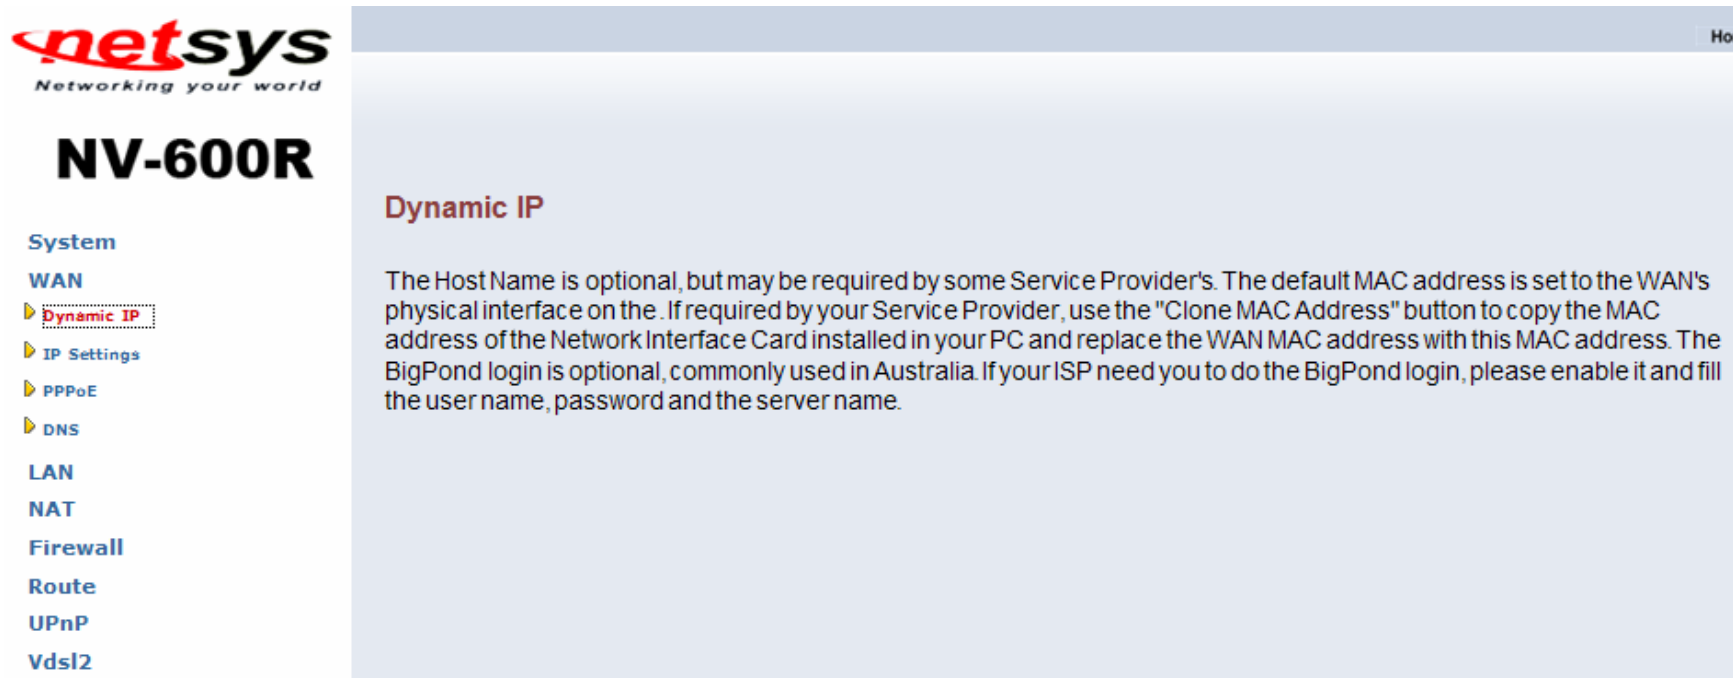



Figure 8.2.4.1 Dynamic IP Configuration

The screen contains the following details:

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page.

8.2.4.2 IP Settings

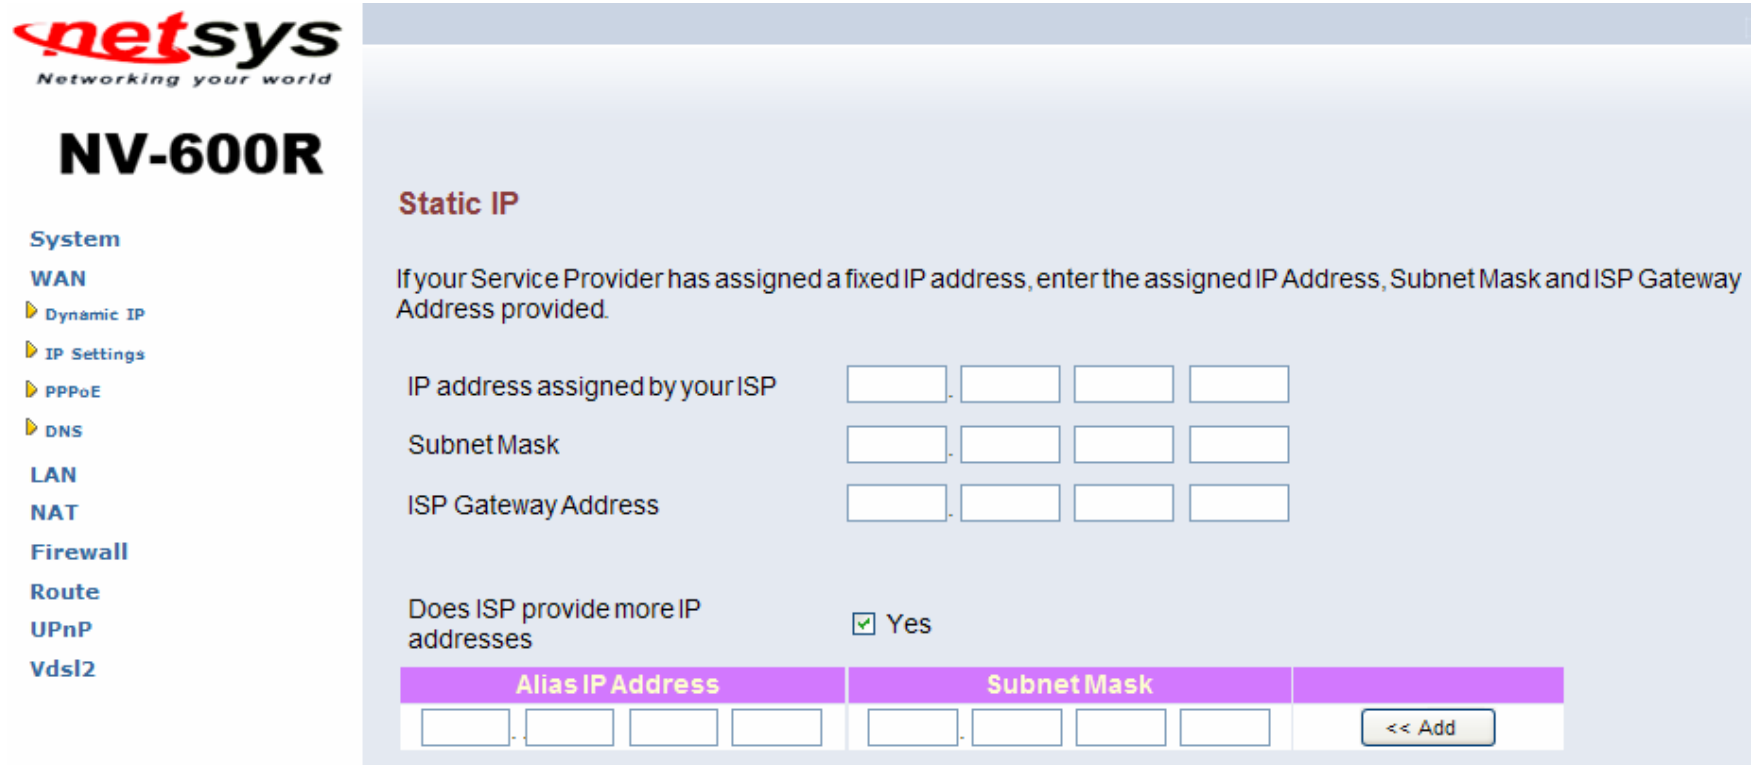To configure the WAN interface to use a Static IP Address, click on the Static IP link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.2](#).



netsys
Networking your world

NV-600R

System

WAN

- Dynamic IP
- IP Settings**
- PPPoE
- DNS

LAN

NAT

Firewall

Route

UPnP

Vdsl2

Static IP

If your Service Provider has assigned a fixed IP address, enter the assigned IP Address, Subnet Mask and ISP Gateway Address provided.

IP address assigned by your ISP: [] [] [] []

Subnet Mask: [] [] [] []

ISP Gateway Address: [] [] [] []

Does ISP provide more IP addresses: ☒ Yes

| Alias IP Address | Subnet Mask |
|------------------|-----------------|
| [] [] [] [] | [] [] [] [] |

<< Add

Figure 8.2.4.2 Static IP Configuration

The screen contains the following details:


Fields in Static IP

| Field | Description |
|----------------------------------|--|
| IP Address assigned by your ISP | Enter the IP Address of NV-600L/R. |
| Subnet Mask | Enter the Subnet Mask of NV-600L/R. |
| ISP Gateway Address | Enter the Gateway address of the NV-600L/R. |
| Does ISP provide more IP Address | Provides more IP Addresses of the WAN interface. Select the check box to enable this option. A screen is displayed as shown in Figure 41. Click Add to add IP Address and Subnet Mask. |
| IP Pool Starting Address | Enter the starting IP Pool Address. |
| IP Pool Ending Address | Enter the ending IP Pool Address. |
| Lease Time | Enter the Lease Time from half hour to two weeks. |
| Local Domain Name | Enter the Local Domain Name but is optional. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.4.3 PPPoE

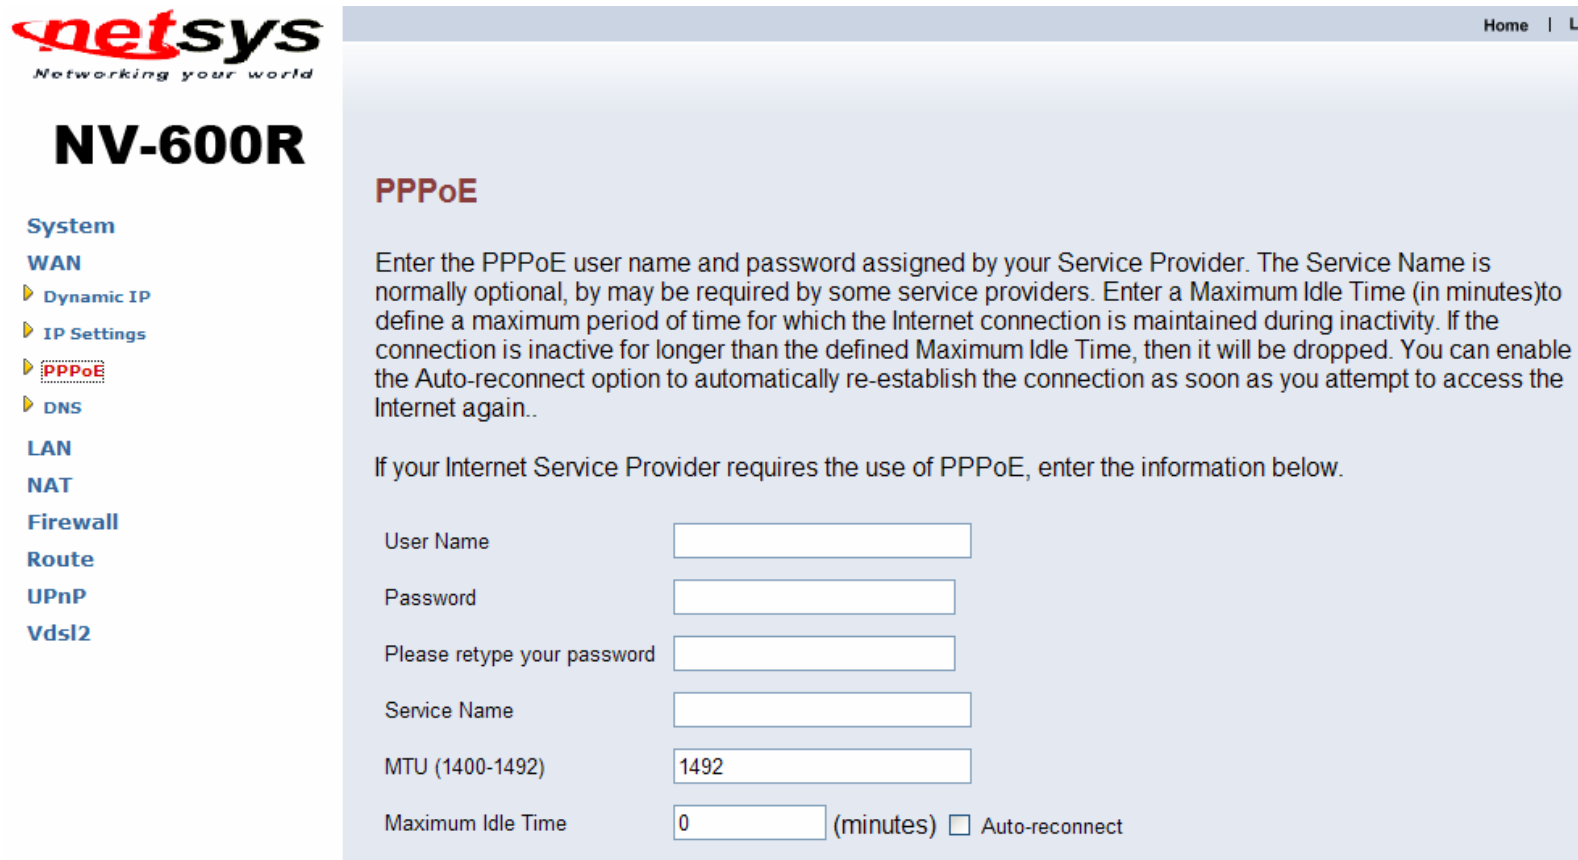To configure the WAN interface to use PPPoE, click on the PPPoE link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.3](#).



netsys
Networking your world

NV-600R

System
WAN
Dynamic IP
IP Settings
PPPoE
DNS
LAN
NAT
Firewall
Route
UPnP
Vdsl2

PPPoE

Enter the PPPoE user name and password assigned by your Service Provider. The Service Name is normally optional, but may be required by some service providers. Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the defined Maximum Idle Time, then it will be dropped. You can enable the Auto-reconnect option to automatically re-establish the connection as soon as you attempt to access the Internet again..

If your Internet Service Provider requires the use of PPPoE, enter the information below.

| | |
|-----------------------------|--|
| User Name | <input type="text"/> |
| Password | <input type="password"/> |
| Please retype your password | <input type="password"/> |
| Service Name | <input type="text"/> |
| MTU (1400-1492) | <input type="text" value="1492"/> |
| Maximum Idle Time | <input type="text" value="0"/> (minutes) <input type="checkbox"/> Auto-reconnect |

Figure 8.2.4.3 PPPoE Configuration

The screen contains the following details:


Fields in PPPoE

| Field | Description |
|-------------------|--|
| User Name | Enter a name to use the PPPoE session. |
| Password | Enter the password of the login user. |
| Retype Password | Enter the password again to reconfirm. |
| Service Name | Enter a service name. |
| Field | Description |
| MTU | Enter the maximum connection units of the PPPoE. The MTU range is 1400 to 1492 bytes. By default, it is 1492. |
| Maximum Idle Time | This is the period of time required to keep the connection alive if no packets are transmitted. If no packets are transmitted between LAN port and WAN port or between NV-600L/R and WAN, the connection is disconnected after the 'Maximum idle time. If the Auto-reconnect check box is selected, the PPP connection is re-established if there is some data that is received from the upper layers to be transmitted on this link. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.4.4 DNS

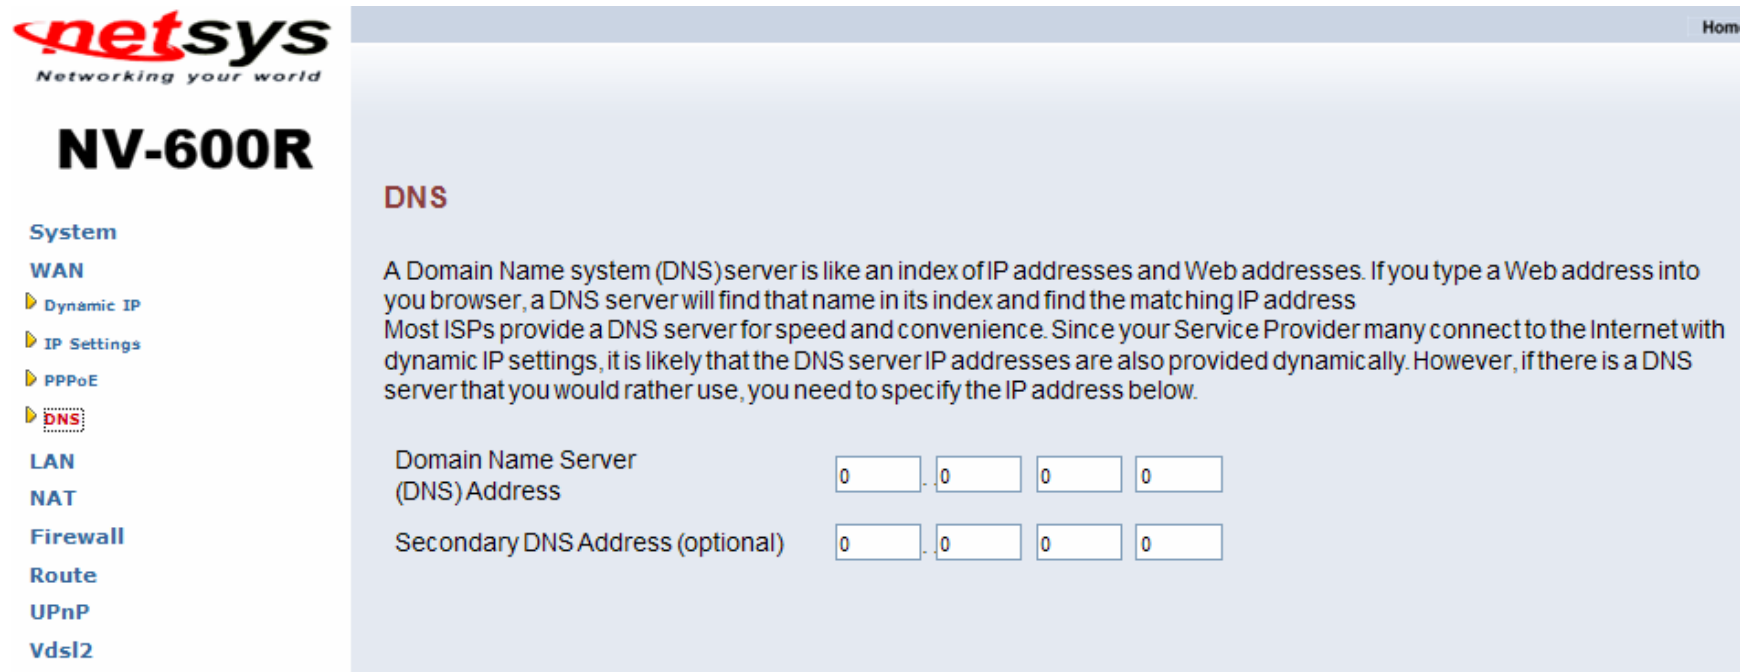To configure the DNS address, click on the DNS link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.4.4](#):



netsys
Networking your world

NV-600R

System

WAN

- Dynamic IP
- IP Settings
- PPPoE
- DNS**

LAN

NAT

Firewall

Route

UPnP

Vdsl2

DNS

A Domain Name system (DNS) server is like an index of IP addresses and Web addresses. If you type a Web address into your browser, a DNS server will find that name in its index and find the matching IP address. Most ISPs provide a DNS server for speed and convenience. Since your Service Provider many connect to the Internet with dynamic IP settings, it is likely that the DNS server IP addresses are also provided dynamically. However, if there is a DNS server that you would rather use, you need to specify the IP address below.

Domain Name Server (DNS) Address

Secondary DNS Address (optional)

Figure 8.2.4.4 DNS Configuration

The screen contains the following details:

Fields in DNS

| Field | Description |
|---------------------------------|--|
| Domain Name Server(DNS) Address | Enter the DNS address of the primary DNS server. |
| Secondary DNS Address(optional) | Enter the address of the secondary DNS server, if available. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.5 LAN

The LAN Setting can be viewed in the left navigation bar. The following are the options available under LAN, as shown in [Figure 8.2.5](#):

- LAN Settings
- DHCP Client List
- LAN Switch Port Setting
- LAN Port Status


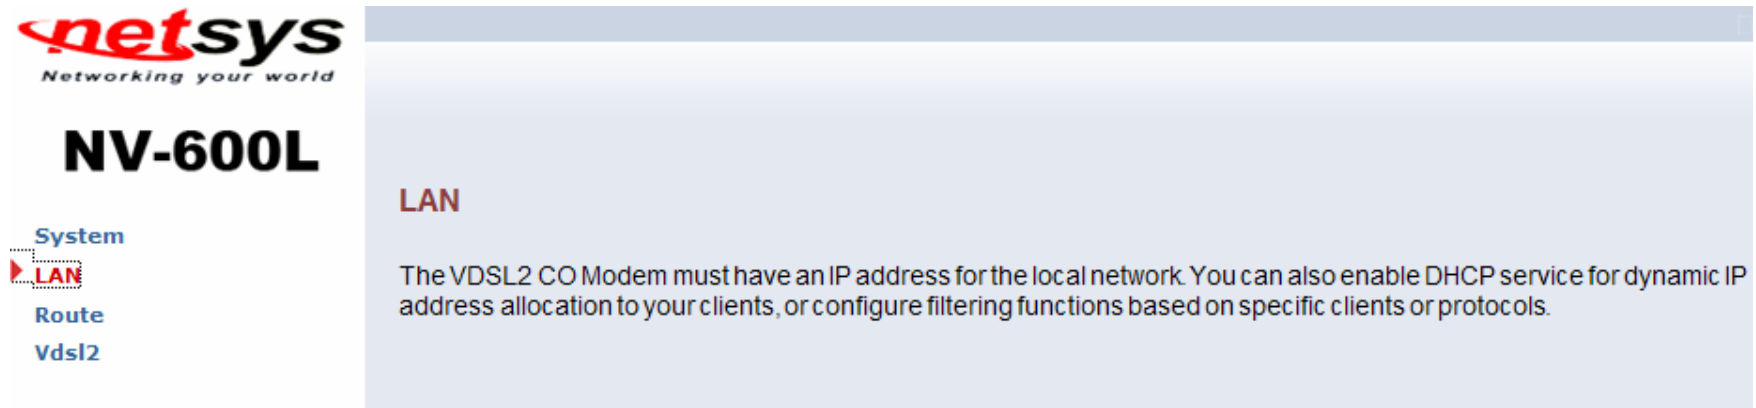


Figure 8.2.5 LAN in Left Navigator Bar

8.2.5.1 LAN Settings

Attention: For the NV-600L/R it is recommended to select a simple IP setting suitable to controlled lab environments. Set a static IP address and don't use DHCP. The required steps are explained in Chapter 4.4.1 on Page 21!

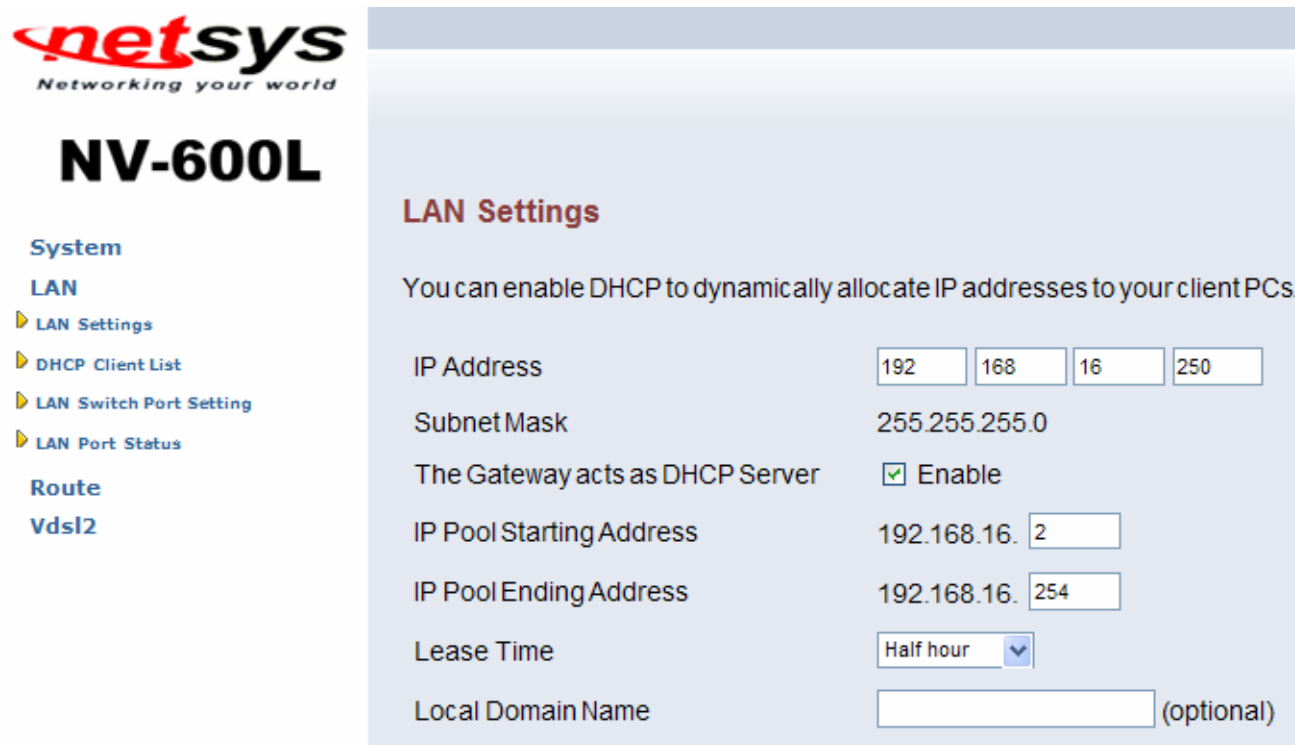To configure the LAN interface, click on the LAN Settings link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.5.1](#) in case of the NV-600 kit.



netsys
Networking your world

NV-600L

System

LAN

- ▶ LAN Settings
- ▶ DHCP Client List
- ▶ LAN Switch Port Setting
- ▶ LAN Port Status

Route

Vdsl2

LAN Settings

You can enable DHCP to dynamically allocate IP addresses to your client PCs.

| | |
|---------------------------------|--|
| IP Address | <input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="16"/> <input type="text" value="250"/> |
| Subnet Mask | <input type="text" value="255"/> <input type="text" value="255"/> <input type="text" value="255"/> <input type="text" value="0"/> |
| The Gateway acts as DHCP Server | <input checked="" type="checkbox"/> Enable |
| IP Pool Starting Address | <input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="16"/> <input type="text" value="2"/> |
| IP Pool Ending Address | <input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="16"/> <input type="text" value="254"/> |
| Lease Time | <input type="text" value="Half hour"/> ▼ |
| Local Domain Name | <input type="text"/> (optional) |

Figure 8.2.5.1 LAN Settings

The screen contains the following details:

Fields in LAN Settings

| Field | Description |
|---------------------------------|--|
| IP Address | Enter the LAN interface IP Address of NV-600L/R. |
| Subnet Mask | Enter the LAN Subnet Mask of NV-600L/R. |
| The Gateway acts as DHCP Server | Enable or disables the DHCP Server of the NV-600L/R. Select the check-box to enable this option. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.5.2 DHCP Client List

To view the DHCP client list, click on the DHCP Client List link in the left navigation bar. A screen is displayed to list all DHCP client connection with IP Address and MAC Address as shown in [Figure 8.2.5.2](#).

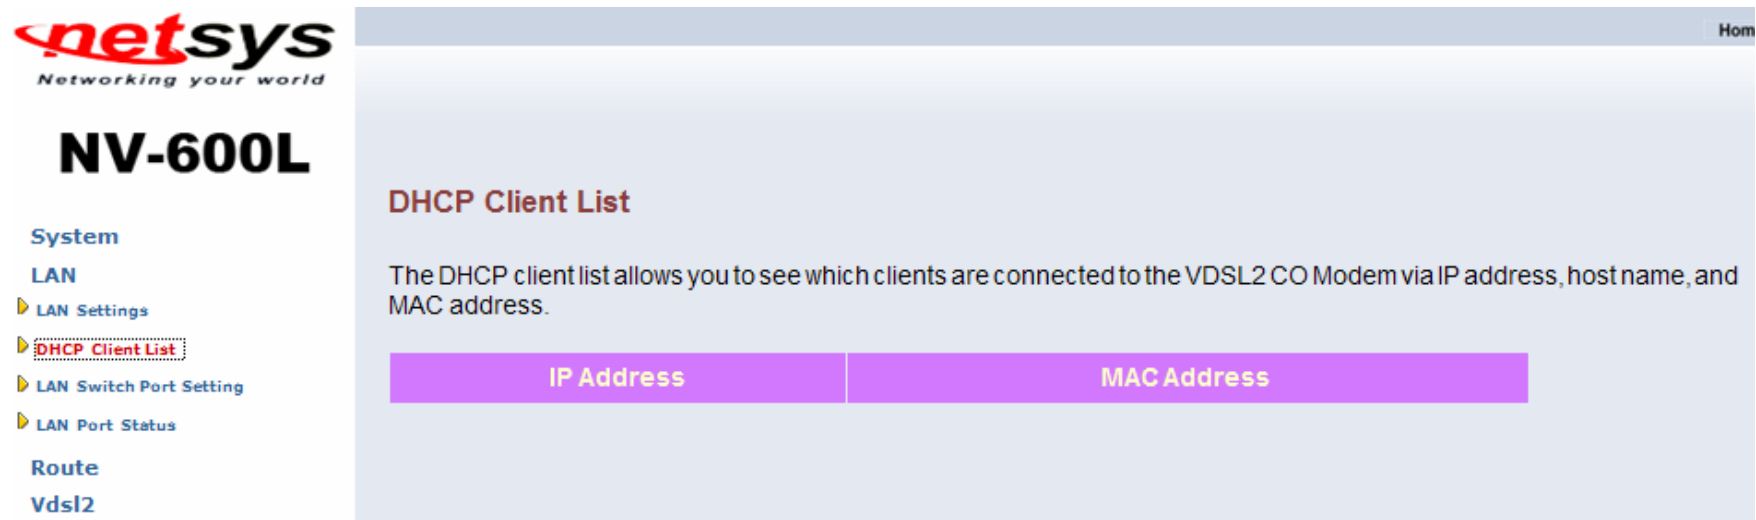


Figure 8.2.5.2 DHCP Client List

8.2.5.3 LAN Switch Port Setting

To view the All LAN Port Setting, click on the All Lan Port Setting link in the left navigation bar. A screen is displayed to all LAN Port Setting as shown in [Figure 8.2.5.3](#).


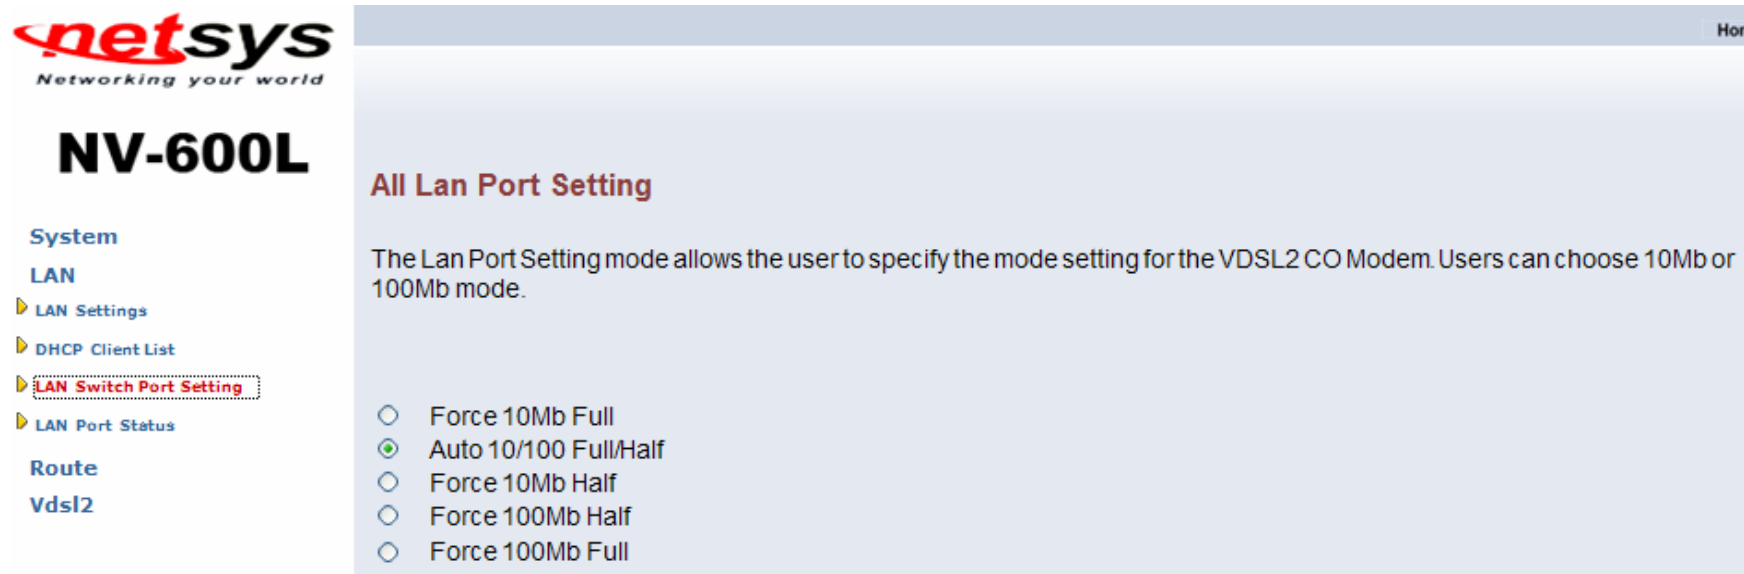


Figure 8.2.5.3 DHCP Client List

8.2.5.4 LAN Port Status

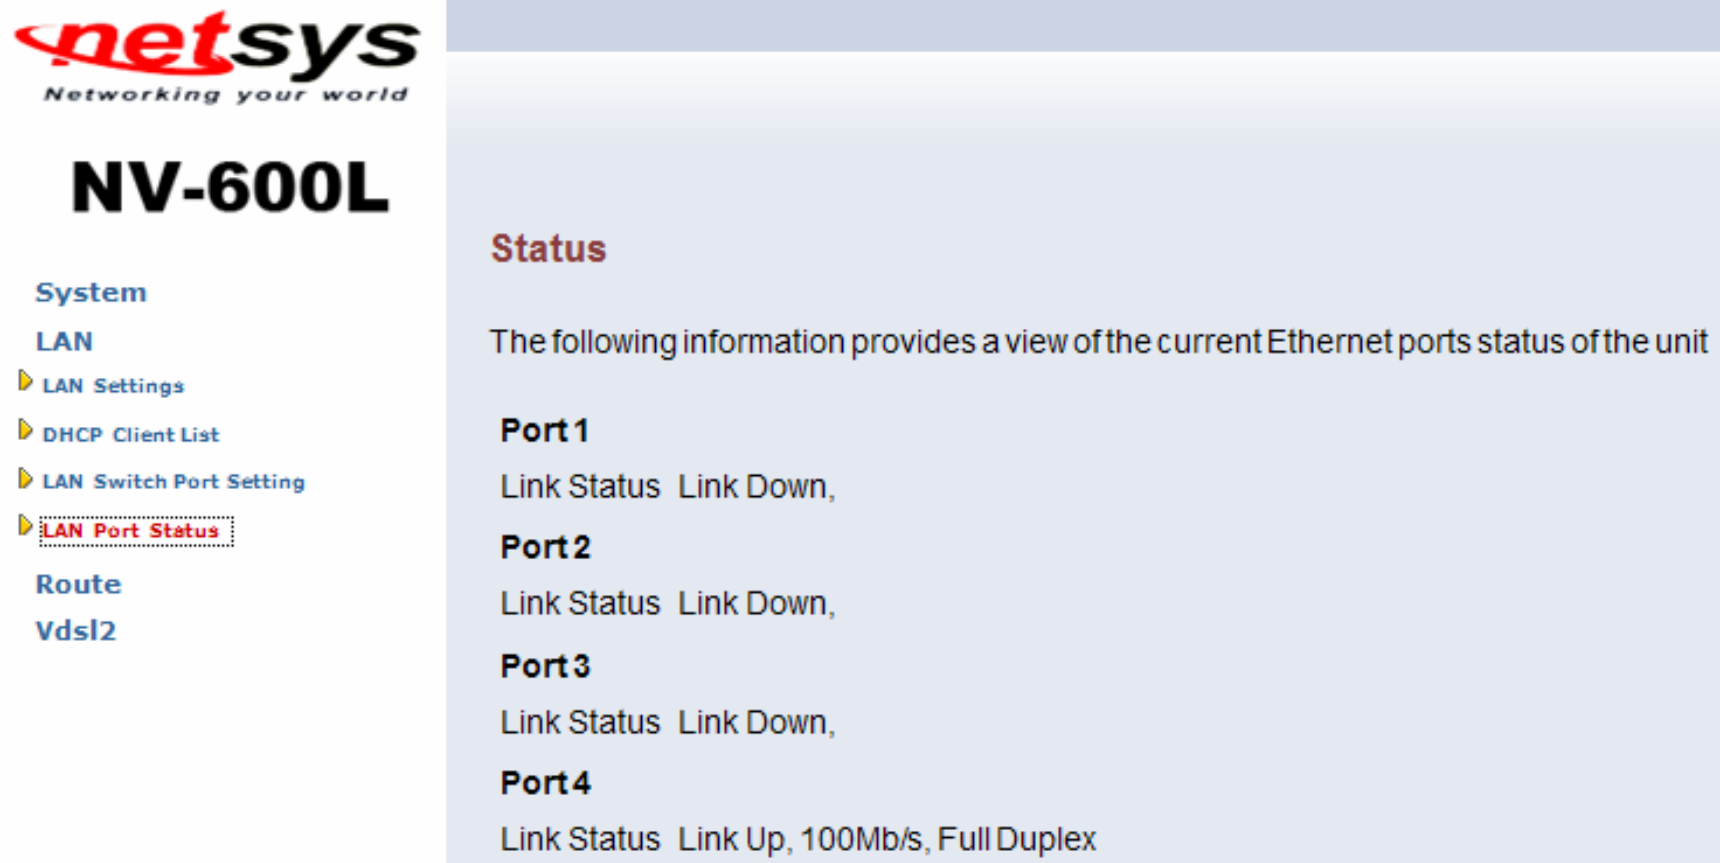The following information provides a view of the current Ethernet ports status of the unit



The screenshot displays the web management interface for the NV-600L router. On the left is a navigation menu with the following items: 'System', 'LAN' (expanded), 'LAN Settings', 'DHCP Client List', 'LAN Switch Port Setting', 'LAN Port Status' (highlighted with a dashed border), 'Route', and 'Vdsl2'. The main content area is titled 'Status' and contains the text: 'The following information provides a view of the current Ethernet ports status of the unit'. Below this, the status of four ports is listed: 'Port 1' (Link Status Link Down), 'Port 2' (Link Status Link Down), 'Port 3' (Link Status Link Down), and 'Port 4' (Link Status Link Up, 100Mb/s, Full Duplex).

netsys
Networking your world

NV-600L

System

LAN

- ▶ LAN Settings
- ▶ DHCP Client List
- ▶ LAN Switch Port Setting
- ▶ **LAN Port Status**

Route

Vdsl2

Status

The following information provides a view of the current Ethernet ports status of the unit

Port 1
Link Status Link Down,

Port 2
Link Status Link Down,

Port 3
Link Status Link Down,

Port 4
Link Status Link Up, 100Mb/s, Full Duplex

Figure 8.2.5.4 LAN Port Status

8.2.6 NAT

The NAT Settings can be viewed in the left navigation bar of NV-600R only. The following are the options available under NAT, as shown in [Figure 8.2.6](#):

- Virtual Server
- Port Mapping
- DMZ



Figure 8.2.6 NAT in Left Navigator Bar

8.2.6.1 Virtual Server

To configure virtual server, click on the Virtual Server link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.6.1](#):

NV-600R

- System
- WAN
- LAN
- NAT
- Virtual Server**
- Port Mapping
- DMZ
- Firewall
- Route
- UPnP
- Vdsl2

Virtual Server

You can configure the Router as a virtual server so that remote users accessing services such as the Web or FTP at your local site via public IP addresses can be automatically redirected to local servers configured with private IP addresses. In other words, depending on the requested service (TCP/UDP port numbers), the Router redirects the external service request to the appropriate server (located at another internal IP address).

| | Private IP | Private Port | Type | Public Port | Enabled |
|---|----------------------------------|----------------------|--|----------------------|--------------------------|
| 1 | 192.168.16. <input type="text"/> | <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="text"/> | <input type="checkbox"/> |
| 2 | 192.168.16. <input type="text"/> | <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="text"/> | <input type="checkbox"/> |
| 3 | 192.168.16. <input type="text"/> | <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="text"/> | <input type="checkbox"/> |
| 4 | 192.168.16. <input type="text"/> | <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="text"/> | <input type="checkbox"/> |
| 5 | 192.168.16. <input type="text"/> | <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="text"/> | <input type="checkbox"/> |

Figure 8.2.6.1 Virtual Server Configuration

The screen contains the following details:


Fields in Virtual Server

| Field | Description |
|--------------|---|
| Private IP | Enter a private IP Address of specified entry. |
| Private Port | Enter a private Port number of the specified entry. |
| Type | Select virtual server protocol type of the specified entry. |
| Public Port | Enter a public port number of the internet user to access the virtual server. |
| Enabled | Enable the specified entry of the virtual server. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.6.2 Port Mapping

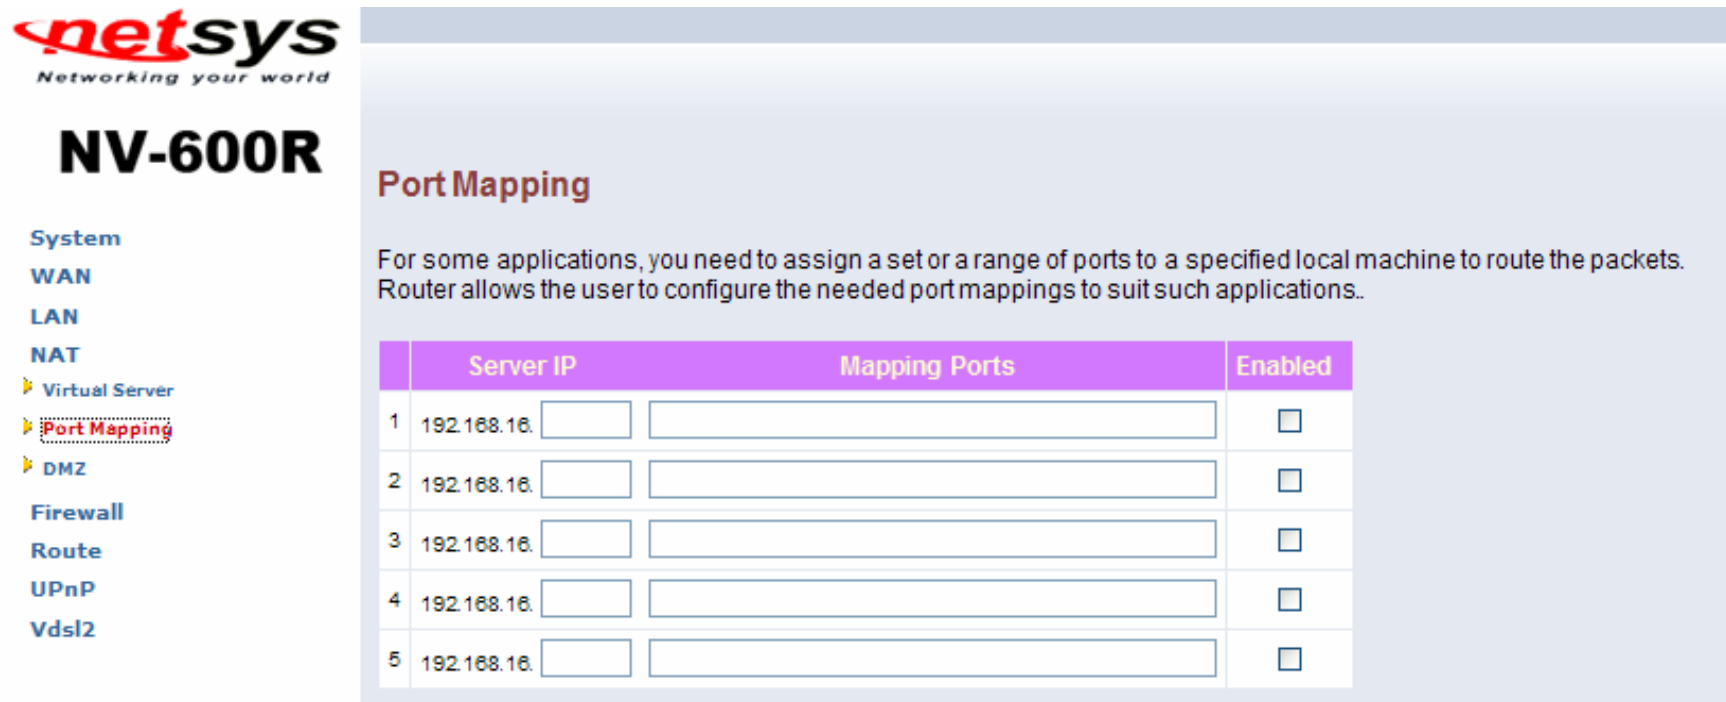To configure Port Mapping, click on the Port Mapping link in the left navigation bar. A screen is displayed as shown in Figure 8.2.6.2:



Port Mapping

For some applications, you need to assign a set or a range of ports to a specified local machine to route the packets. Router allows the user to configure the needed port mappings to suit such applications..

| | Server IP | Mapping Ports | Enabled |
|---|----------------------------------|----------------------|--------------------------|
| 1 | 192.168.16. <input type="text"/> | <input type="text"/> | <input type="checkbox"/> |
| 2 | 192.168.16. <input type="text"/> | <input type="text"/> | <input type="checkbox"/> |
| 3 | 192.168.16. <input type="text"/> | <input type="text"/> | <input type="checkbox"/> |
| 4 | 192.168.16. <input type="text"/> | <input type="text"/> | <input type="checkbox"/> |
| 5 | 192.168.16. <input type="text"/> | <input type="text"/> | <input type="checkbox"/> |

Figure 8.2.6.2 Port Mapping Configuration

The screen contains the following details:

Fields in Port Mapping

| Field | Description |
|--------------|--|
| Server IP | Enter the IP Address of a specified local machine. |
| Mapping Port | Assign a range of port or specific port number to route the packets. |
| Enabled | Enable a specified entry of the Port Mapping. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.6.3 DMZ

To configure the DMZ, click on the DMZ link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.6.3](#):

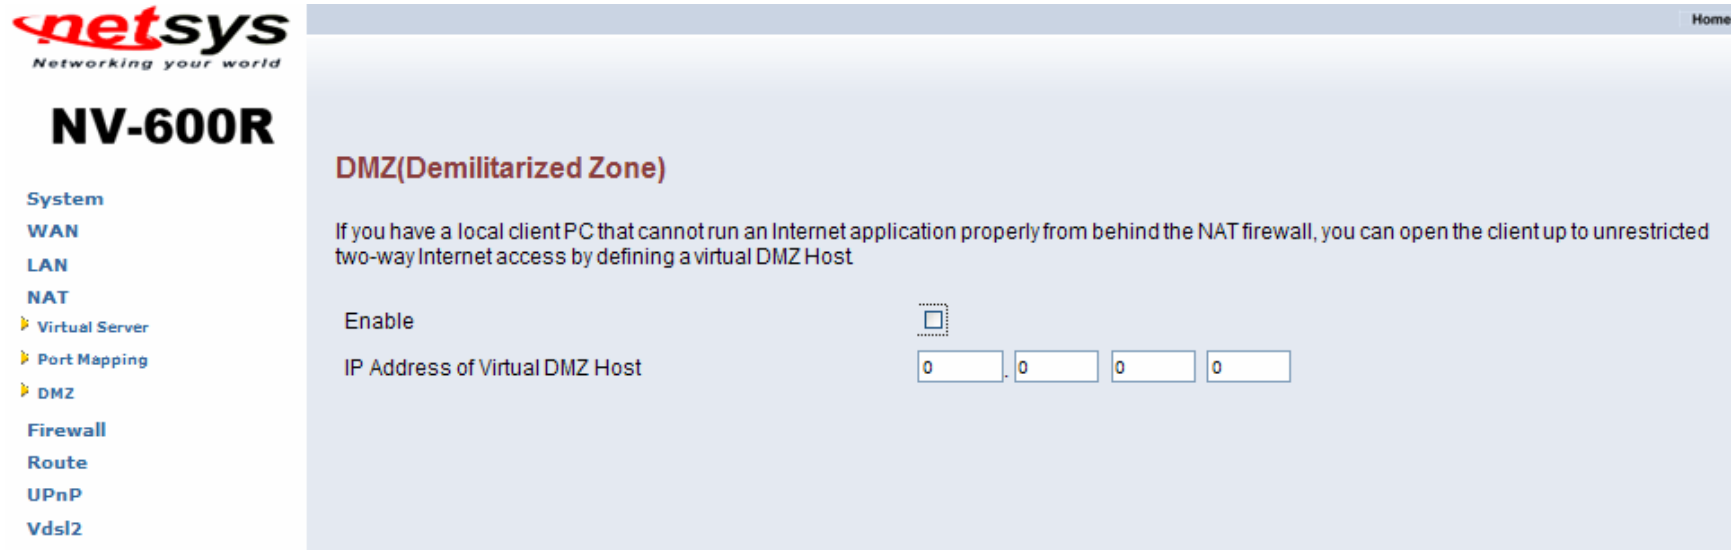


Figure 8.2.6.3 DMZ Configuration

The screen contains the following details:

Fields in DMZ

| Field | Description |
|------------|---|
| Enable | Enable or disable the DMZ setting of NV-600L/R. Select the check box to enable this option. |
| IP Address | Enter IP Address of the DMZ host. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.7 Firewall

The Firewall Settings can be viewed in the left navigation bar of NV-600R only. The following are the options available under Firewall, as shown in [Figure 8.2.7](#):

- Firewall Options
- Client Filter MAC Control
- MAC Control



Figure 8.2.7 Firewall in Left Navigator Bar

8.2.7.1 Firewall Options

To enable the firewall options, click on the Firewall Options link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.7.1](#):

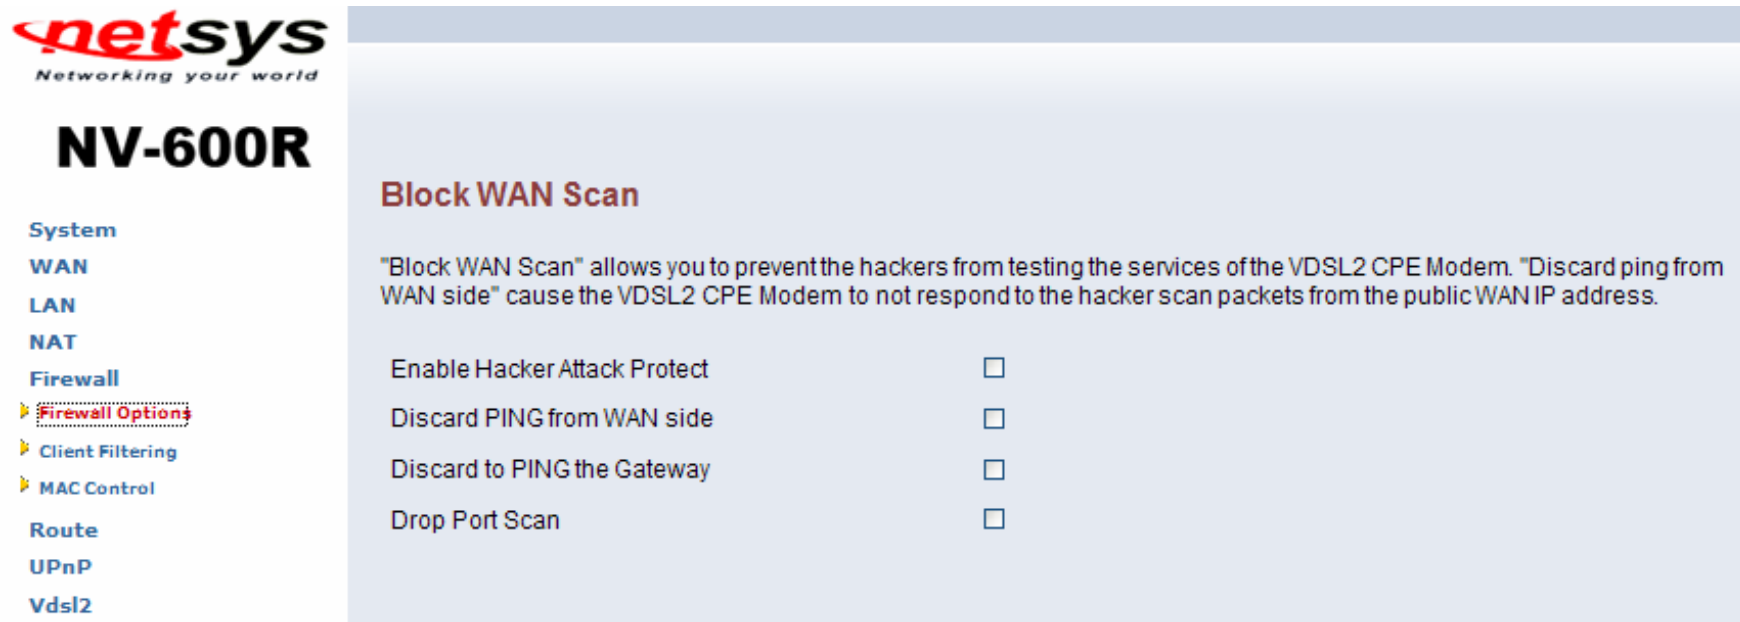


Figure 8.2.7.1 Firewall Options Configuration

The screen contains the following details:


Fields in Firewall Options

| Field | Description |
|------------------------------|---|
| Enable Hacker Attack Protect | Select the check box to log and drop all the hacker attack events. |
| Discard PING from WAN | Select the check box to drop all PING from the WAN side. |
| Discard PING the Gateway | Select the check box to drop all PING to NV-600L/R packet for the LAN side. |
| Drop Port Scan | Select the check box to drop all the port scan packets. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.7.2 Client Filtering

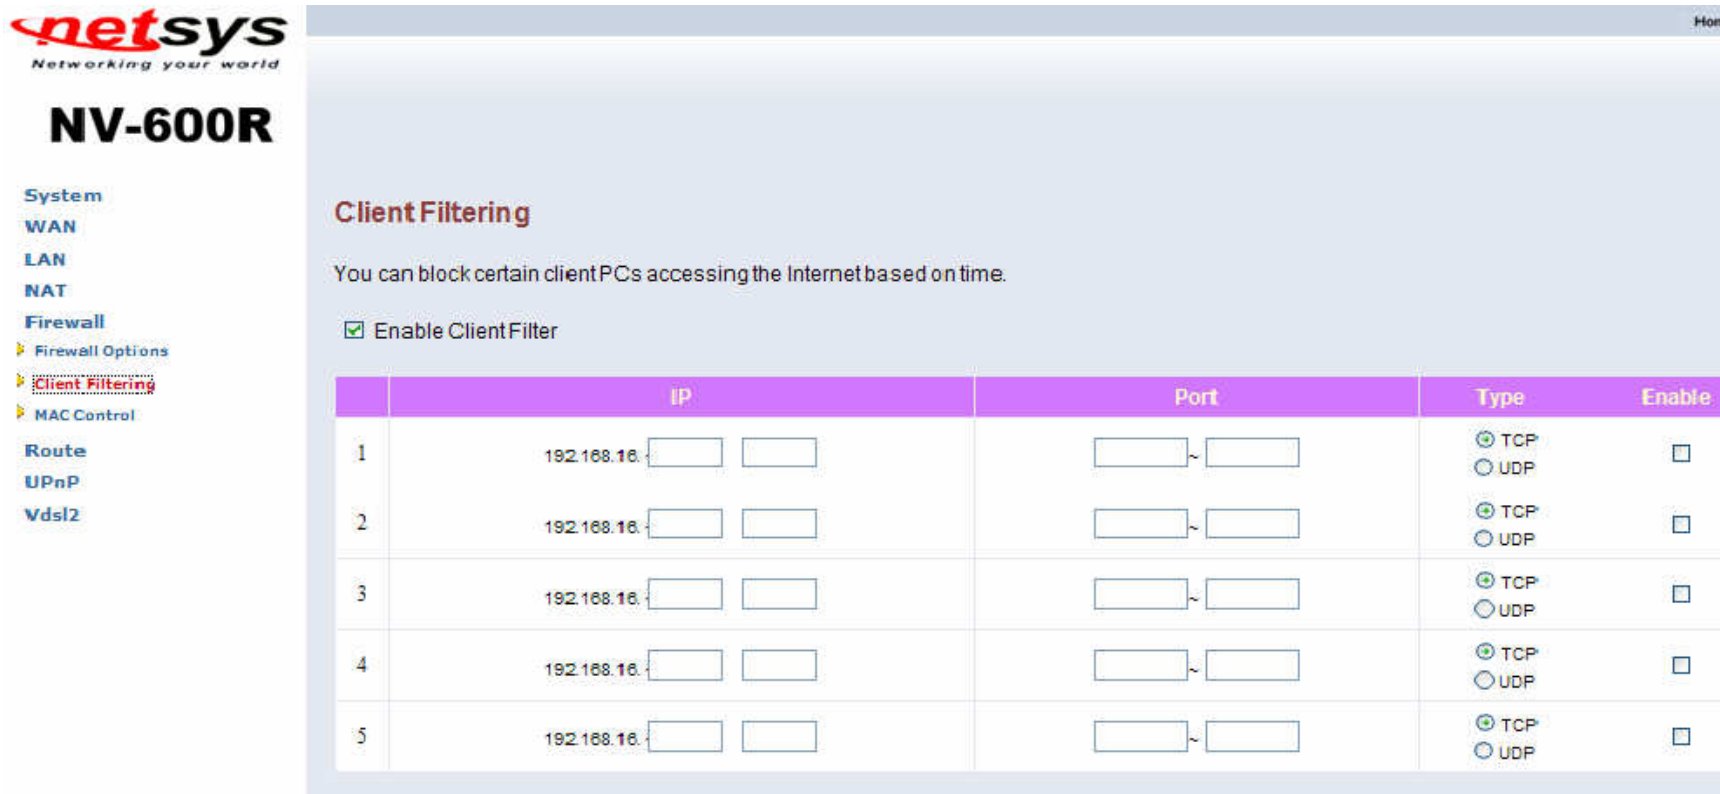To enable Client Filter, click on the Client Filter link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.7.2](#).



netsys
Networking your world

NV-600R

System
WAN
LAN
NAT
Firewall
Firewall Options
Client Filtering
MAC Control
Route
UPnP
Vdsl2

Client Filtering

You can block certain client PCs accessing the Internet based on time.

☒ Enable Client Filter

| | IP | Port | Type | Enable |
|---|---|---|---|--------------------------|
| 1 | 192.168.16. <input type="text"/> <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="checkbox"/> |
| 2 | 192.168.16. <input type="text"/> <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="checkbox"/> |
| 3 | 192.168.16. <input type="text"/> <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="checkbox"/> |
| 4 | 192.168.16. <input type="text"/> <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="checkbox"/> |
| 5 | 192.168.16. <input type="text"/> <input type="text"/> | <input type="text"/> ~ <input type="text"/> | <input checked="" type="radio"/> TCP <input type="radio"/> UDP | <input type="checkbox"/> |

Figure 8.2.7.2 Client Filter Configuration

The screen contains the following details:

Fields in Client Filter

| Field | Description |
|----------------------|---|
| Enable Client Filter | Enable or disable the Client Filter feature of VDSL2 CO&CPE ROUTER. Select the check box to enable this option. |
| IP | Enter the filter IP Address range of the local machines under VDSL2 CO&CPE ROUTER. |
| Port | Enter the filter Port number range of the local machines under VDSL2 CO&CPE ROUTER. |
| Type | Select TCP or UDP to filter the protocol type packets from the local machines. |
| Enable | Provides more IP Addresses of the WAN interface. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.7.3 MAC Control

To configure MAC Control, click on the MAC Control link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.7.3](#)



MAC Control

You can block certain client PCs accessing the Internet based on MAC addresses.

MAC Address Control: ☒

MAC Address Control List

| Block Connect to Internet | MAC Address | |
|---------------------------|---|------------------------------------|
| <input type="checkbox"/> | <input type="text"/> - <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/> | <input type="button" value="Add"/> |

Figure 8.2.7.3 MAC Control Configuration

The screen contains the following details:

Fields in MAC Control

| Field | Description |
|------------------------------|--|
| MAC Address Control | Enable or disable the MAC address control. |
| Block Connection to Internet | Enable or disable block status. If the check box is selected, it blocks the specified MAC address. |
| MAC Address | Assign the blocking MAC address for local machine. |

- Click APPLY to save the information that has been entered.
- Click CANCEL to exit from this page without saving the changes.

8.2.8 Route Settings

The Route Settings can be viewed in the left navigation bar. The following are the options available under Route, as shown in [Figure 8.2.8](#):

- Static Routing
- Routing Table List


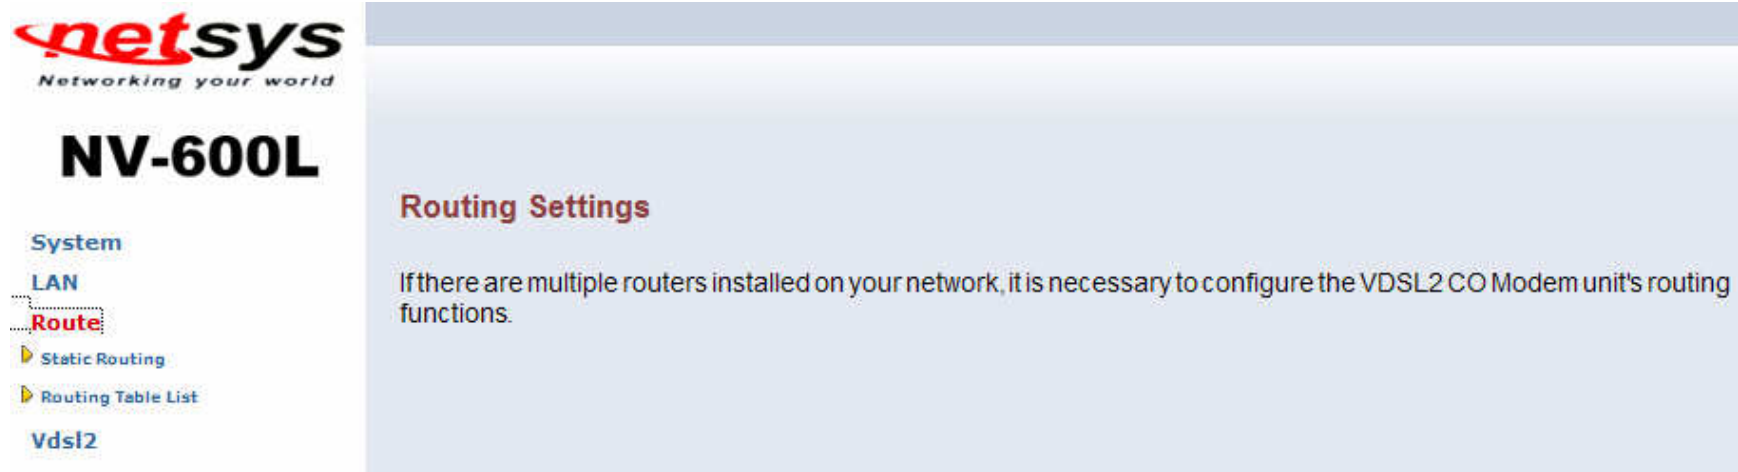


Figure 8.2.8 Route in Left Navigator Bar

8.2.8.1 Static Routing

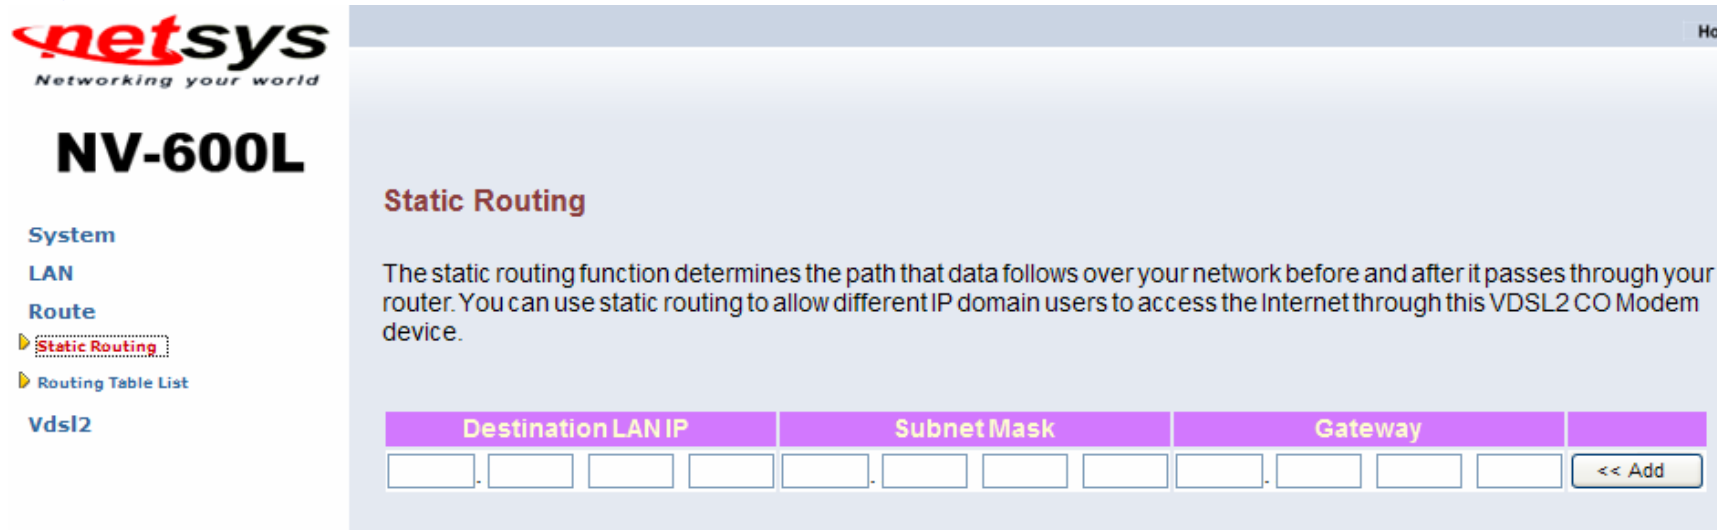To setup Static Routing, click on the Static Routing link in the left navigation bar. A screen is displayed as shown in Figure 8.2.8.1.



Static Routing

The static routing function determines the path that data follows over your network before and after it passes through your router. You can use static routing to allow different IP domain users to access the Internet through this VDSL2 CO Modem device.

| Destination LAN IP | Subnet Mask | Gateway |
|---|---|---|
| <input type="text"/> . <input type="text"/> <input type="text"/> <input type="text"/> | <input type="text"/> . <input type="text"/> <input type="text"/> <input type="text"/> | <input type="text"/> . <input type="text"/> <input type="text"/> <input type="text"/> |

<< Add

Figure 8.2.8.1 Static Routing Configuration

The screen contains the following details:


Fields in Static Routing

| Field | Description |
|--------------------|---|
| Destination LAN IP | Enter the IP Address of routing entry. |
| Subnet Mask | Enter the Subnet Mask of routing entry. |
| Gateway | Enter the Gateway address of routing entry. |

- Click Add to add the information that has been entered.

8.2.8.2 Routing Table List

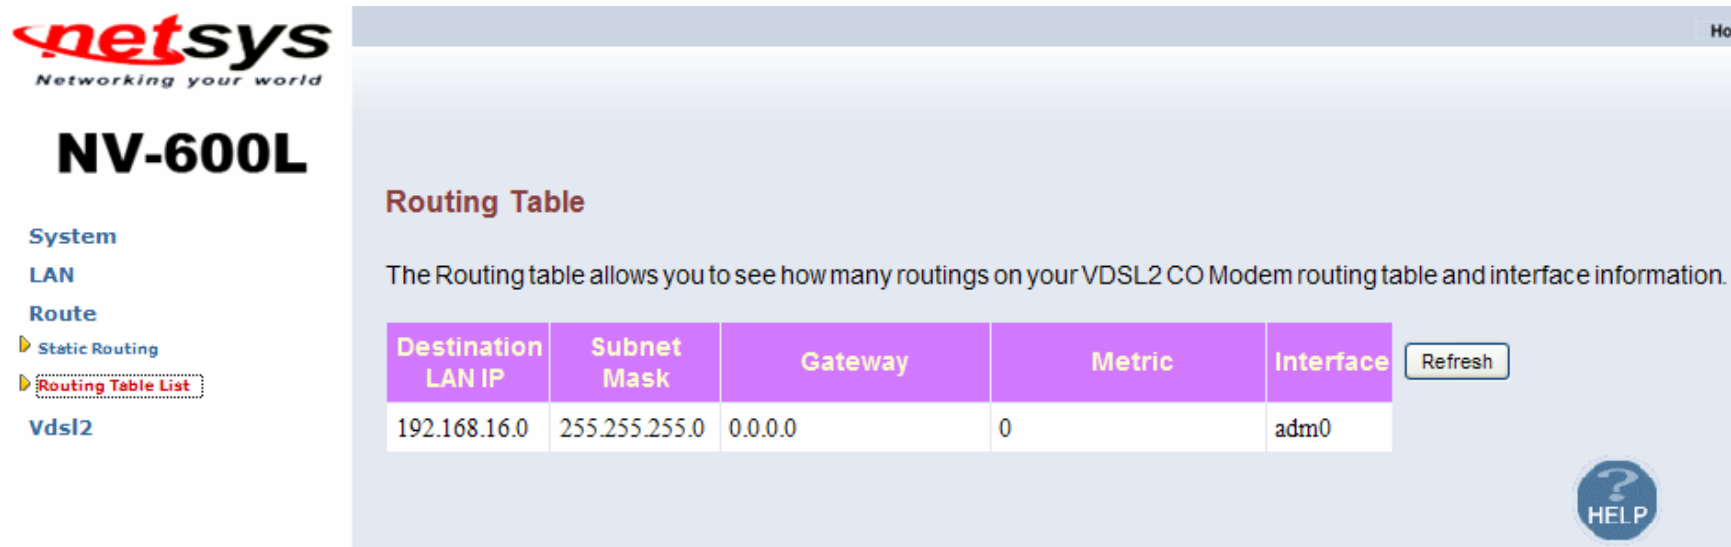To view the Routing entry table list of NV-600L/R, click on the Routing Table by link in the left navigation bar. A screen is displayed as shown in [Figure 8.2.8.2](#).



netsys
Networking your world

NV-600L

System
LAN
Route
▶ Static Routing
▶ **Routing Table List**
Vdsl2

Routing Table

The Routing table allows you to see how many routings on your VDSL2 CO Modem routing table and interface information.

| Destination LAN IP | Subnet Mask | Gateway | Metric | Interface |
|-----------------------|----------------|---------|--------|-----------|
| 192.168.16.0 | 255.255.255.0 | 0.0.0.0 | 0 | adm0 |

Refresh

HELP

Figure 8.2.8.2 Routing Table List

The screen contains the following details:

- Click Refresh to update currently routing list of the NV-600L/R.

8.2.9 UPnP Setting

The UPnP Settings can be viewed in the left navigation bar of NV-600R only. The following are the options available under UPnP, as shown in Figure 8.2.9.

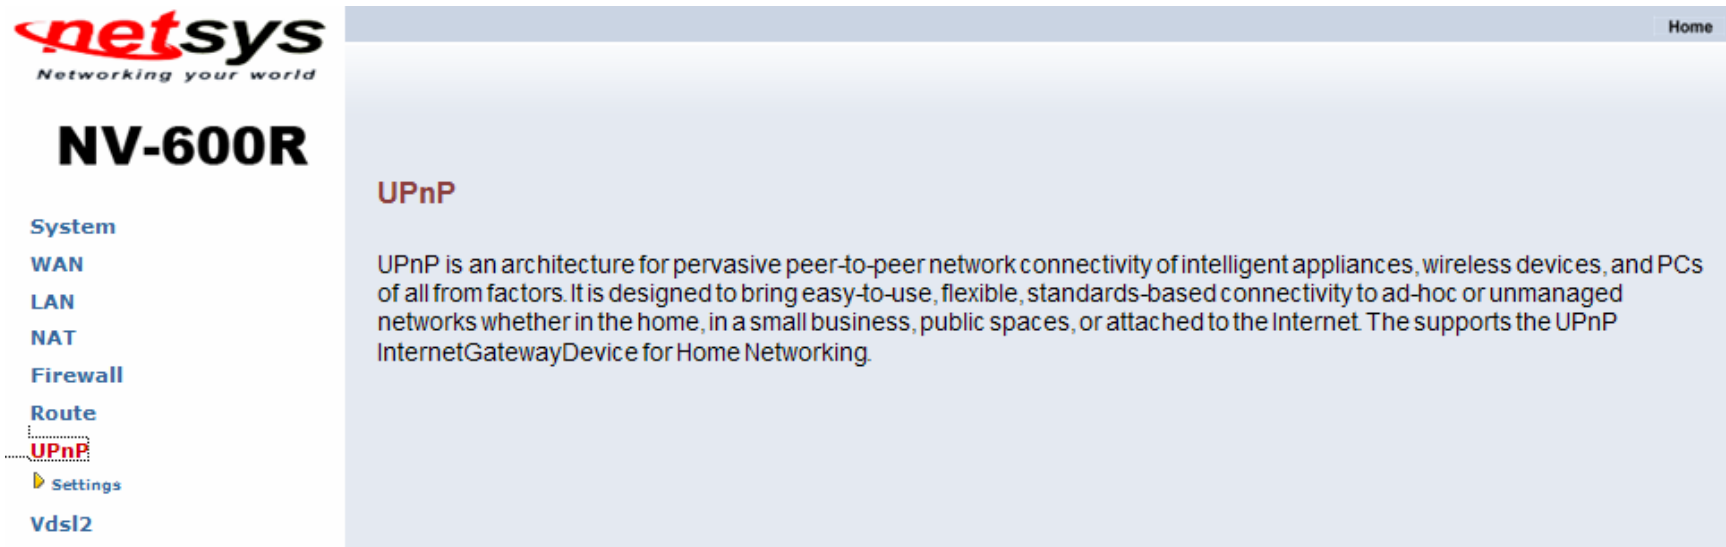


Figure 8.2.9 UPnP in Left Navigator Bar

8.2.9.1 Settings

To enable or disable the UPnP Settings, click on the Settings link in the left navigation bar. A screen is displayed as shown in Figure 8.2.9.1.

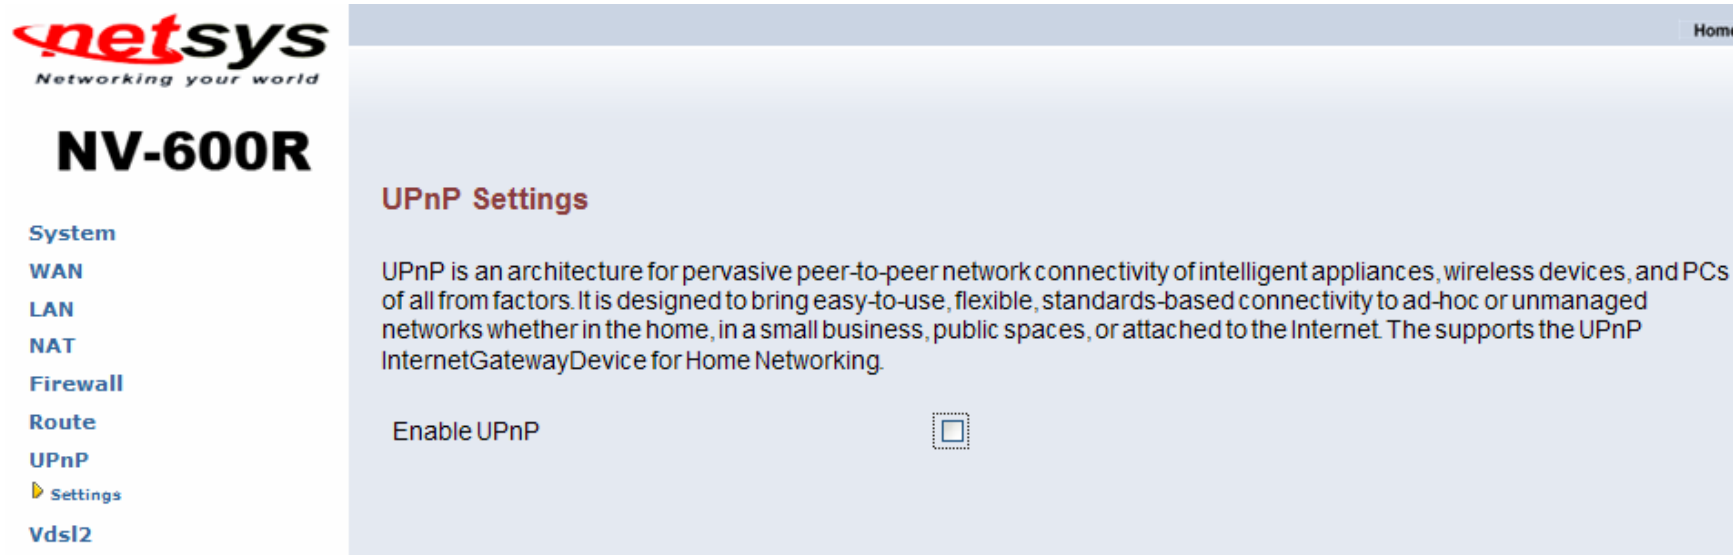


Figure 8.2.9.1 UPnP Configuration

The screen contains the following details:

Fields in UPnP Settings

| Field | Description |
|-------------|--|
| Enable UPnP | To enable or disable UPnP Setting. Select the check box to Enable or Disable the UPnP function of SPEED-VDSL2 CO&CPE ROUTER. |

- Click APPLY at any time during configuration to save the information that you have entered.
- Click CANCEL to exit from this page without saving the changes.

Appendix A: Product Features & Specification

Features:

- Compliant with IEEE 802.3 & 802.3u Ethernet Standards
- Compliant with G993.2 VDSL2 standards
- Provides 4 x 10/100M auto-sensing RJ-45 Ethernet ports
- Supports Bandwidth setup with 100 Mbps VDSL RJ-11 ports
- POTS / ISDN Splitter port RJ-11 x 1 (Splitter on board)
- Support Downstream Power Back-Off(DPBO)
- Supports auto speed for VDSL2 port
- Supports Web management (HTTP)
- Supports TFTP
- Supports Console (RS-232C)
- Supports PPPOE
- Supports NAT/DHCP/DMZ
- Supports Firewall
- Supports Route & Switch (Bridge) mode
- Supports UPnP
- Supports Loop back
- Supports SNR indicator for checking phone wiring quality
- Supports Interleave Delay to prevent against noise and data errors
- Support 8a, 8b, 8c, 8d, 12a, 12b, 17a, 17b, and 30a band profile
- Support 997, 998 band plan
- Provides surge protection for VDSL2 port

Specifications:

| | |
|-------------------------------|---|
| Standard: | IEEE802.3 standard IEEE802.3u standard Compliant G993.2 VDSL2 standard |
| Interface: | 4 * RJ-45 10/100Mbps Ethernet port 1 * RJ-11 connector for VDSL2 1 * RJ-11 connector for POTS/ISDN device |
| Band Profile: | 8a, 8b, 8c, 8d, 12a, 12b, 17a, 17b, 30a |
| Band Plan: | 997, 998 |
| Max. Bandwidth: | Symmetric 100 Mbps / 0.3 km |
| LED indication: | Power LED Link/Active Status for Ethernet port * 4 Link LED for VDSL2 port |
| Switch method: | Store and forward |
| Console port: | RS-232C/115200bps |
| Flow control: | Full duplex: IEEE 802.3x Half duplex: Back pressure |
| Power Consumption: | NV-600L (LT): 5.52W NV-600R (NT): 6.12W |
| Operating Temperature: | 0℃ ~ 50℃ (32℉ ~ 122℉) |

| | |
|-----------------------------|---|
| Storage Temperature: | -20℃ ~ 70℃ (-4℉ ~ 158℉) |
| Humidity: | 10 to 90% (non-condensing) |
| Weight: | 0.96kg & 1.03kg (for metal case) |
| Dimensions: | 184 x 146 x 40 mm (7.2" x 5.74" x 1.57") |
| AC to DC adapter: | Input range: 85VAC~240VAC/50~60Hz Output: 12VDC/1A |
| EMI Compliant: | CE, FCC, VCCI |
| Chipset: | Infineon |

Appendix B: Troubleshooting

- 1. Symptom:** Connected the CO Router with CPE Router within 300 meters RJ-11 phonecable got only less than 10 Mbit/s.

Cause: Some testing program which is base on TCP/IP protocol such as FTP, Iperf, NetIQ, the bandwidth of testing outcome will be limited by TCP window size.

Solution: We recommend to test VDSL2 bandwidth best by Smartbit equipment, if you don't have Smartbit, we recommend test that by IPERF program, and TCP window size must be setted max. 64k, the parameter as iperf -c server IP address -i 1 -t 50 -w 65535 for client side.
- 2. Symptom:** VDSL2 CO router cannot link with CPE router.

Cause:

 1. The VDSL2 CO/CPE mode settings of VDSL2 router become unknown.
 2. VDSL2 CO and CPE router tone mode is different due to mixed use of new and old hardware VDSL2 routers.

Solution:

 1. Using the console, reboot the system and go to loader menu. Select set boot parameters and choose the VDSL2 CO/CPE mode correctly. Choose "1" if it is CO router and "0" if it is CPE router. Do not just press enter to skip the setting as it will not retain even if the setting is correct, then it will become unknown causing the VDSL2 router not to link.
 2. Update the old hardware to D series firmware so that you can set the same tone mode for both CO and CPE router.
- 3. Symptom:** VDSL2 web management that uses public IP address cannot be accessed.

Cause: It can be affected by some incoming traffic perhaps web crawlers, worms or other automated activity.

Solution: Open a command prompt and log in to telnet by writing “telnet xxx.xxx.xxx.xxx”, xxx is the IP address of your router, then write “cd /etc/rc.d/init.d” to go to this folder, then write “./httpd start” to open the web management, so that it can be accessed again.

Appendix C : Compliance and Safety Information

FCC Radio Frequency Interference Statement

This equipment has been tested to comply with the limits for a computing device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment can generate, use and radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by taking one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the distance between the equipment and receiver.
3. The equipment and the receiver should be connected to outlets on separate circuits.
4. Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

If this telephone equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance in order for you to make necessary modifications to maintain uninterrupted service.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

Important Safety Instructions

Caution: The direct plug-in wall transformer serves as the main product for disconnecting. The socket outlet shall be installed near the product and be readily accessible.

Caution: Use only the power supply included with this product. In the event the power supply is lost or damaged: In the United States, use only with CSA certified or UL listed Class 2 power supply, rated 12Vdc 1A or above.

IN Europe, use only with CE certified power supply, rated 12Vdc 1A or above.

Do not use this equipment near water, for example in a wet basement.

Avoid using a telephone during an electrical storm. There may be a remote risk of electrical shock from lightning.

Do not use the telephone to report a gas leak in the vicinity of the leaking area.

If you experience trouble with this unit, please contact customer service at the address and phone listed below.

DO NOT DISASSEMBLE THIS EQUIPMENT. It does not contain any user serviceable components.

FCC Warning

This equipment has been tested to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment can generate, use, and radiate radio frequency energy and, if not installed and used in accordance

with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at owner's expense.

CE Mark Warning

This is a CE class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warranty

The original owner of this package will be free from defects in material and workmanship for one year parts after purchase. For the warranty to apply, you must register your purchase by returning the registration card indicating the date of purchase.

There will be a minimal charge to replace consumable components, such as fuses, power transformers, and mechanical cooling devices. The warranty will not apply to any products which have been subjected to any misuse, neglect or accidental damage, or which contain defects which are in any way attributable to improper installation or to alteration or repairs made or performed by any person not under control of the original owner.

The above warranty is in lieu of any other warranty, whether express, implied, or statutory, including but not limited to any warranty of merchantability, fitness for a particular purpose, or any warranty arising out of any proposal, specification, or sample. We shall not be liable for incidental or consequential damages. We neither assume nor authorize any person to assume for it any other liability.



WARNING:
DO NOT TEAR OFF OR REMOVE THE WARRANTY STICKER AS SHOWN, OR THE WARRANTY IS VOID.